

Fanvil

Fanvil

Smart Video Phone Fanvil C600 User Guide



Corporate Headquarters

Fanvil Technology Co., Ltd

Address: Level 3, Block A, Gaoxingqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China

Web Site: www.Fanvil.com

Tel: +86 755 26402199

Fax: +86 755 26402618

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxingqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737



Safety Notices

Please read the following safety notices before installing or using this phone. They are crucial for the safe and reliable operation of the device.

- Please use the external power supply that is included in the package. Other power supplies may cause damage to the phone, affect the behavior or induce noise.
- Before using the external power supply in the package, please check with home power voltage. Inaccurate power voltage may cause fire and damage.
- Please do not damage the power cord. If power cord or plug is impaired, do not use it, it may cause fire or electric shock.
- The plug-socket combination must be accessible at all times because it serves as the main disconnecting device.
- Do not drop, knock or shake it. Rough handling can break internal circuit boards.
- Do not install the device in places where there is direct sunlight. Also do not put the device on carpets or cushions, it may cause fire or breakdown.
- Avoid exposure the phone to high temperature, below 0°C or high humidity. Avoid wetting the unit with any liquid.
- Do not attempt to open it. Non-expert handling of the device could damage it. Consult your authorized dealer for help, or else it may cause fire, electric shock and breakdown.
- Do not use harsh chemicals, cleaning solvents, or strong detergents to clean it. Wipe it with a soft cloth that has been slightly dampened in a mild soap and water solution.
- When lightning, do not touch power plug or phone line, it may cause an electric shock.
- Do not install this phone in an ill-ventilated place.
- You are in a situation that could cause bodily injury. Before you work on any equipment, be aware of the hazards involved with electrical circuitry and be familiar with standard practices for preventing accidents.

Contents

Contents	1
Introduction	1
Smart Video Phone Fanvil C600 Overview	1
With Attachment	1
Phone component descriptions	2
Interface introduction.....	4
Touch Screen Description.....	7
Status Bar.....	9
Functional applications:.....	11
Update of the phone.....	12
Dsskey	14
Contacts	18
Add new local contact	18
Add account.....	19
Creat group.....	20
Favorite.....	20
Network Phonebook	21
BlockList & CallBarring.....	22
Phone Settings	23
System info.....	23
Network	24
Network	24
PPPoE.....	26
QoS.....	27
Port.....	30
STUN.....	31
802.1x	32
Accounts	32
Account.....	32
Global	38
Call	38
General.....	39
DND.....	43
Dial plan	44
Account.....	47

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxingqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

Display.....	49
Tone	51
Time&date	51
Maintain.....	52
Service port.....	53
CWMP set.....	54
Backup.....	56
Phone Reset	56
Update.....	57
OTA System Update	58
Audio	59
Audio	59
Audio param	60
Video.....	61
Video param.....	61
Bandwidth.....	62
Softkey.....	64
MCAST	65
Reboot.....	66
Call Service.....	66
Register.....	66
Outgoing & Incoming call	67
Video Call.....	68
Blind Transfer	70
Semi-attended Transfer.....	71
Attended Transfer	71
Conference Call	72
Call Hold.....	73
Call record	74
To Ring Page.....	74
Android Settings	75
Ethernet configuration	75
Security.....	76
Language&Input	77
Web Settings	77
Logon.....	77
Network	78
QoS & VLAN.....	78

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

Service Port.....	81
Registration.....	82
Dial Plan	84
Basic Settings.....	84
Dial Plan Add.....	85
Security.....	88

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxingqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

Introduction

Thank you for purchasing the C600 Android smart video phone. The C600 is a fully featured video phone that provides voice and video communication over the data network. This phone has all the features of a traditional telephone and all gives access to many data service features. This guide will help you easily use the various features and services available on your phone.

Smart Video Phone Fanvil C600 Overview



With Attachment


Item	Function
------	----------

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

Power Adapter	Power supply for telephone.
Network Cable	Used to access network for the phone.
Handset	Make phone calls with the phone's basic functions.
Handset Cable	Connected with the Handset and the phone.



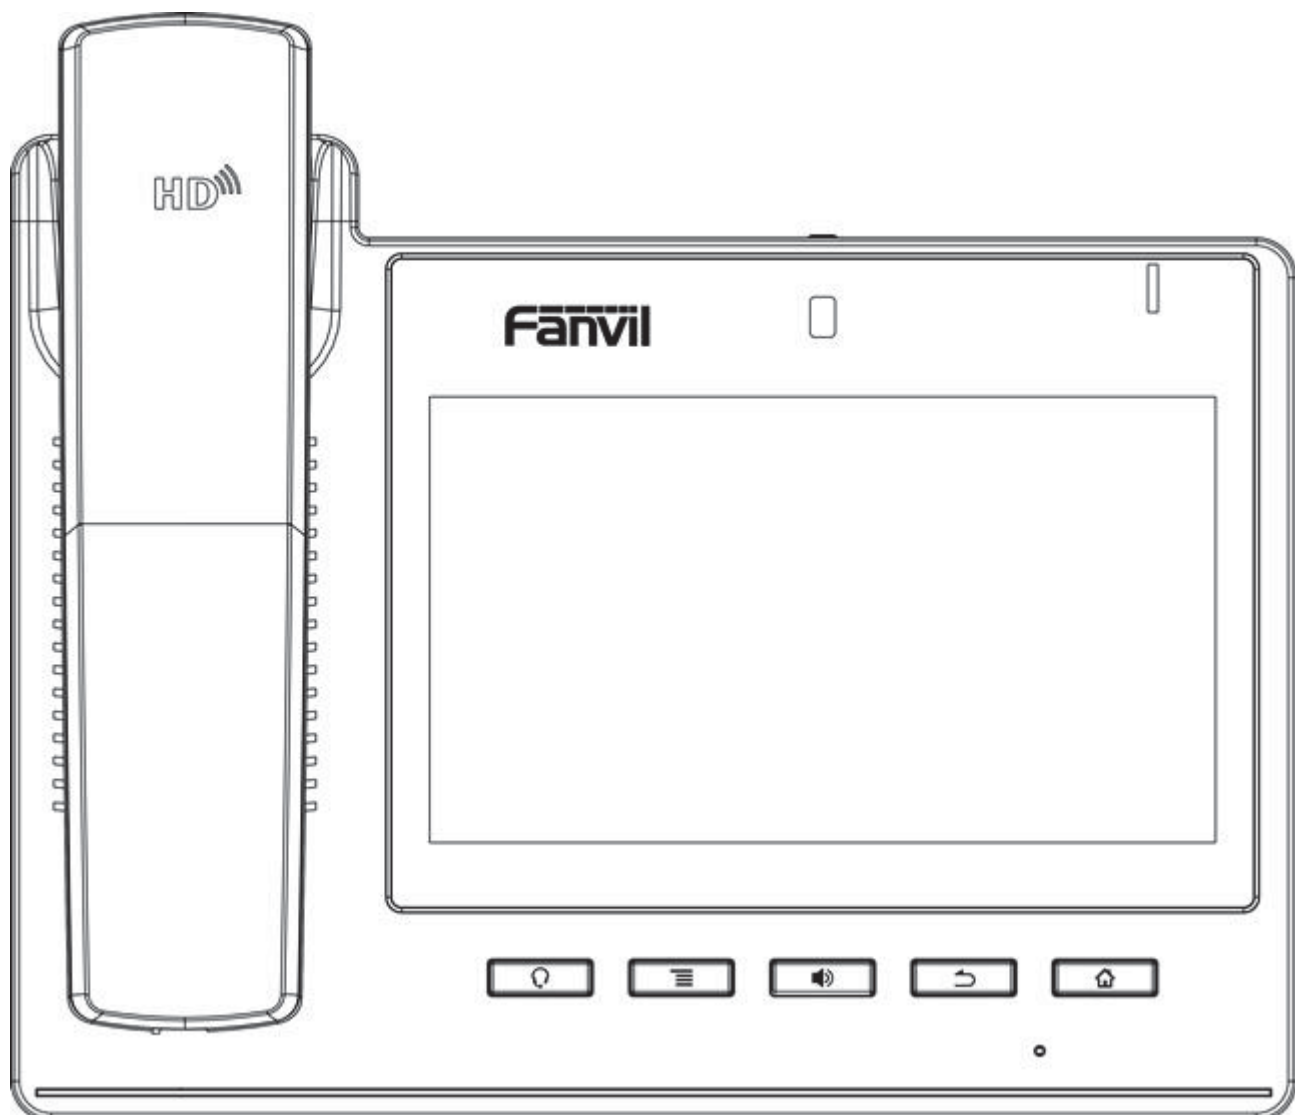



Phone component descriptions




Phone Elements Icon

Fanvil Technology Co., Ltd




HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

Key	Function
	Headset key. Click it enter the dial interface when the phone is in desktop, receive the call using headset mode or switch the call to headset mode during a call.
	Option key. You can browse and accomplish all functions of the phone through pressing this key. Also, you can press and hold this key to complete screen-shot.
	The hands-free key. Click it enter the dial interface when the phone is in desktop, receive the call using hands-free mode or switch the call to hands-free mode during a call.
	Return key. Press this button in the detailed interface, it will return to the previous interface; If it is pressed in the application program interface, the current program will be closed.
	Home key. Press this key, the phone will return to the idle screen. Also, you can press and hold this key to display all the processes and manually finish off running in the background process.
	The camera.

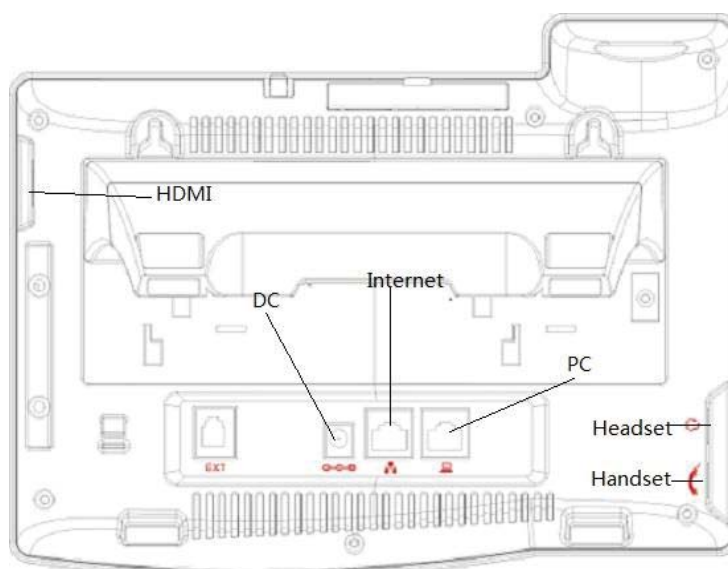Interface introduction




Interface Illustration Picture 1

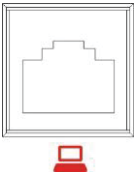	Name	Meaning
	SD Card Interface	Connect SD Card for saving data.
	DC Power Interface	Input: 220V AC Output: 12V DC
	PC Interface	Specification RJ45, connect it computer.


Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
 Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
 Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

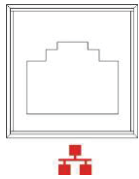

Internet Interface

 Specification RJ45, connect it to network.



Handset Interface

Specification RJ9, used to connect the Handset to the phone.







Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737





Interface Illustration Picture 2

Name	Meaning
 	<p>USB Interface Connect it to USB disk.</p>
	<p>Headset Interface Specification RJ9, used to connect the Headset to the phone.</p>
	<p>HDMI Interface Interface for high-definition audio and video. A-A interface, A to A interface.</p>

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxingqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
 Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
 Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

- **Note:**

1. Put the handset line into the handset interface according to the interface illustration.
2. Plug the power adapter into the DC port; poke the other side of the power adapter into an electric socket.
3. Insert one end of RJ45 network cable into the phone's WAN port (Please refer to the interface illustration picture 1) and put the other end into the network equipment. After that, if the network connection status on the status bar is displayed as , actions such as making some telephone calls and surfing the internet could be done. If the network connection status on the status bar is displayed as , please verify whether the network was configured correctly and the network cable was plugged in correctly.

Touch Screen Description

You can touch the screen manually to complete the corresponding operation. Here are three ways to use:

Click: Any icon or button can be clicked to realize its function.

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737



Touch screen:

- Press and hold the standby interface will pop-up choice wallpaper desktop option box, you can according to the prompt to change the wallpaper.
- Support full multi-touch.

Slide:

Slide your finger on the screen upward or downward slowly to move the interface on the screen.

On some kinds of screen such as idle desktop, you can switch the desktop just by moving your fingers on the screen to left or right. Dragging your finger to slide will not select or activate anything on the screen.

You can just wait or gently press any place of the screen to stop the sliding after your finger rapidly sliding on the screen. Gently pressing or touching to stop the scrolling will not select or activate anything on the screen.








Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

Status Bar








All of the status information about C600 is displayed on the top of the screen. You can click on the notification icon in the left of the status bar or drag down the drop-down list with your fingers to enter the notification panel to further review and deal with all of the information.

Note:The right icon of the status bar can't be drag, just the left can.

Status bar	Meaning
 Handset mode	Indicates that the phone is in the handset mode.
 Headset mode	Indicates that the phone is in the headset mode.
 Silent mode	Shows that the phone is in silent mode. This mode can be canceled by directly clicking the mute button when the screen is in the idle interface.
 Hands-free mode	Indicates that the call is in hands-free status.
 Alarm clock	If you set an alarm clock, the alarm clock icon will display on the status bar.
 Network status (successful)	Displays that the network connection is successful. Tap the icon directly into the network settings.
 Network status (failed)	Shows that the network connected failed. You need to check the network is

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
 Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
 Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

		properly connected and the parameters are configured correctly.
	SD card	Displays that the phone successfully identifies the USB device. Tap the icon directly to switch into the USB application wizard.
	Missed calls	Shows that there are several missed calls. You can click on the icon directly to switch into the call log.
	Open the DND	Shows that the phone is on “Do Not Disturb” mode. Any of the call could be directly rejected before it’s ring interface appears. There is only a missed call icon leaving in the status bar.
	Call forward	Shows that the call forward function is opened.
	Auto answer	Shows that the auto answer function is opened.
	Black list	If a phone number is added to the firewall, then open the firewall function, all calls about this phone number could be rejected directly.
	New record	Indicates that there are several new

unread phone recordings.

Functional applications:



Phone

Click this icon, and it will switch to pre-dial interface. You can make some phone calls through the screen.



Email

Has the function of sending and receiving e-mail. When an account has been configured successfully, you can send and receive your e-mail on the phone and this account will automatically sync the contacts to the mailbox account.



Phone Settings

It contains Network, Account, Call, Display and so on. You can configure some settings.



Contacts

Support functions such as search, add, remove and edit.



settings

It contains Wireless & Networks, Device, Personal and so on, you can configure some settings in the corresponding menu.(Android system settings)



Message

Like the phone, with messages to write, read and send function.



MWI

All calls will be transferred into voice mail when the MWI is enabled.

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737



Calendar

Enter into the calendar and you can view the accurate date.



Call log

Enter the call log and you can view all call records. You can also view the "Incoming Calls", "Outgoing Calls" and "Missed Calls" records by pressing the Option key.



Import and Export Management

Have export and import contacts.



PPPoE

Connect PPPoE.

Update of the phone

Please contact with service provider to get the new version to upgrade.

Strongly recommended:

- 1) Before the upgrade the new version, please send personal data backup to mobile devices, to prevent accidental loss.
- 2) Once the upgrade process, please do not power blackout, equipment may not be able to start.



Auto provision: Keep phone registered successfully and configure parameters about automatic updates such as server address, upgrade file name, time interval and so on. And then the phone will check for updates from the server at a fixed time intervals and upgrade

Fanvil Technology Co., Ltd


HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737




itself. See the specific automatically upgrade instructions, please switch to Update.

Manual upgrade----- USB: Will upgrade package in U disk and inserted the U disk into the USB interface (the content of the need to be updated).Before the phone restart, at the same

time hold down the “” and “”, then insert the power supply and will enter the unit at this time to Recovery mode, you can see under the Recovery operation

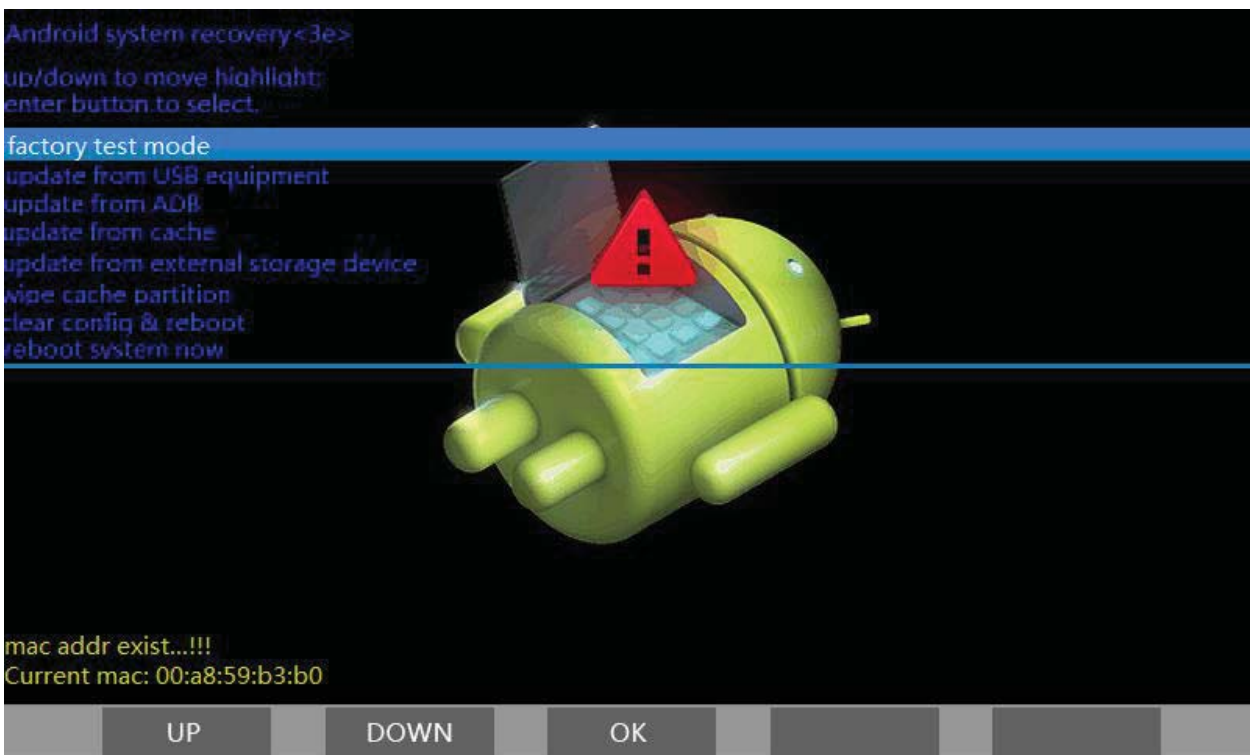menu, shown below:



Through the hardkey “UP”, “DOWN “, “OK”, to operate on the Recovery menu.

Select “update from USB equipment” or “update from external storage device “(SD card), enter the sub-directory and select the upgrade packages, click on “OK” key to start upgrade .After the success of the upgrade, there will be prompt on interface, the user can

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

immediately return to the main menu select “reboot system now” to restart the system to start using the new version.

Notes: In some cases after upgrading, in order to avoid new and old version data of incompatible problems, needs to remove user data and system cache (the so-called double wiper) whether you need specific clear, please refer to the Release Note.

Web Update:

Input the phone’s IP on the web;

Input the user name and password to phone’s web;

Enter “MAINTENANCE”—”UPDATE”;

Click the button “Browser” to select the image on your PC and click the button “Update”;

Waiting, the system will be update success.

Dsskey

Introduction: This module contains five expansion module, 140 editable key. You can press and hold the key to edit it. Line1~5, Reidal and Release are the default keys, but you can also edit them. Like the below picture:



Type	Meaning
	<p>Clicking on the button you can dial the mapped number directly.</p> <p>Subscribe: None、BLF、Presence、MWI、Intercom、Call Park and Call Forward.</p> <p>Pickup number: The number which server set.</p> <p>Pickup: That is, when A calls B, B ringing but no one answered the call, C could dial a number which is comprised of specified prefix and B's number, and then C can talk with A.</p> <p>BLF: It used to prompt you the state of the subscribe user, and that could pick up the subscribed number by the state. BLF help you monitor the state of subscribe user (idle, ringing, a call).</p> <p>Presence: Compared to BLF, the Presence is also able to view whether the user is online.</p> <p>Note: You cannot subscribe the same number for BLF</p>
Memory Key	

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxingqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
 Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
 Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

and Presence at the same time.

None: You can call the number directly which you set. This feature is convenient for you to dial the number which you frequently dialed.

Intercom: This feature allows the operator or the secretary to connect the phone quickly; it is widely used in office environments.

MWI: Press this button to call voicemail and listen to the message.

Call Park: You can use this button to call current resides on the server, a convenient time to call back.

Call Forward: You can transfer the current call to other on the phone.

Line	The button map the SIP line, it enter the dial pad and light the default sip line when you click the button.
Key Event	The button map some Key Event. Title: Consistent with the subscription name. Subtype: Some basic keys.
DTMF	It maps the keypad of the phone, allowing you to edit the dialed number or input numbers during a call.
URL	It maps the website. You can click it to open the URL directly.
Multicast	It maps the Multicast. You can click it to make a multicast.
Application	This button mapping third-party applications, press it to open the corresponding application Settings.



The LED status of BLF

BLF Status	LED Color	LED Flashing
Invalid	None	Off
Off Line	None	Off
Idle	Green	Steady
Talking	Red	Steady
Ring	Green	Fast flash
Alerting	Red	Steady
Parked	Red	Fast flash
Subscribe Failed	Off	None

The LED status of Presence

Presence Status	LED Color	LED Flashing
Invalid	None	Off

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxingqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
 Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
 Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

Off Line	None	Off
On Line	Green	Steady
Talking	Red	Steady
Ring	Green	Fast flash
Alerting	Red	Steady
Available	Green	Steady
Idle	Green	Steady
Parked	Red	Fast flash
Subscribe Failed	None	Off

Note: Please set Type first, then set subtype and value base on the introduction.


You can select value from contacts by clicking the contact icon. Save the configuration-
You can delete the dsskey by the same method, press and hold the key to edit it ,
clear->save.

Contacts

Add new local contact


1. Tap the contacts button;
2. Tap “+” in the upper-right corner;
3. Select “Keep Local” ;



4. Add a picture for a contact. Tap  into the picture selection interface to select photos in your list of photos when editing contacts. It will automatically return to the editing interface after you save it. If you want to change the picture, tap the Contacts icon to select “Remove photo” ,”Take new photo “or “Select new photo from Gallery” ;
5. You can click the little arrow to expand the name what you want to edit;
6. Follow the prompts to complete the edit contacts, you can also select “Save to DSS key”. Click “Done” to save it.


Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

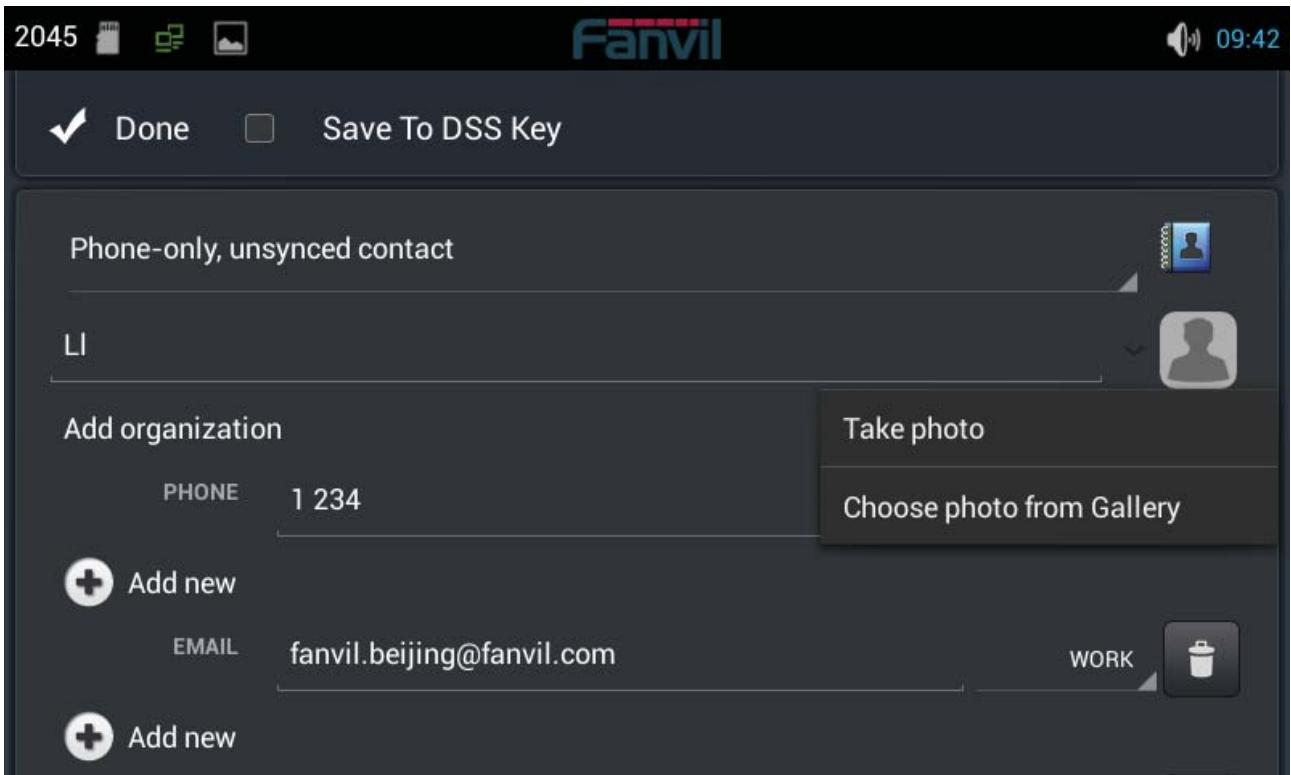

Add account

1. Tap the contact button;
2. Tap “+” in the upper-right corner;
3. Select “Add account”;
4. Edit exchange account and follow the prompts to complete the editing.

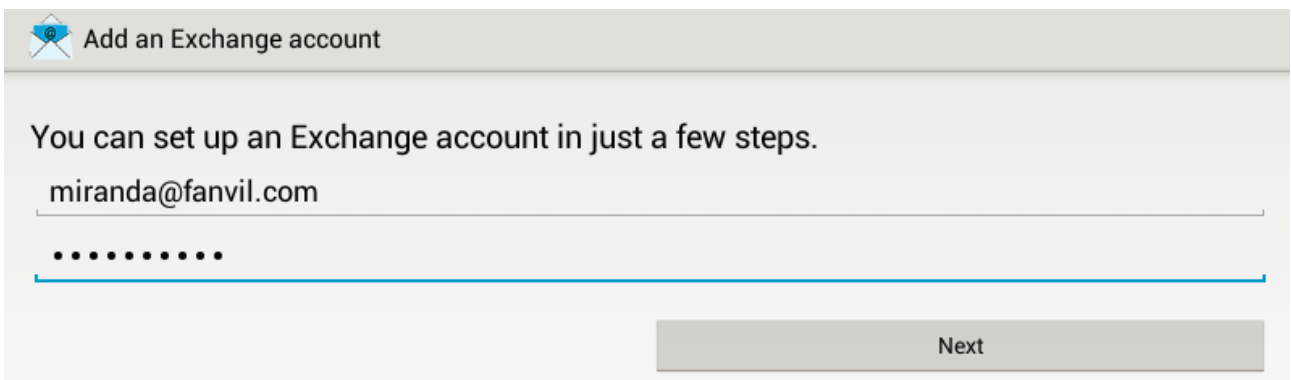


Fanvil Technology Co., Ltd


HQ Add: Level 3, Block A, Gaoxingqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

Creat group

1. Tap the “Group” button;
2. Click “+” in the upper-right corner;
3. You can select “Create local group” or “Create account group”;
4. Edit group name, then pick members from contact list;
5. Click “Done” to save the group.

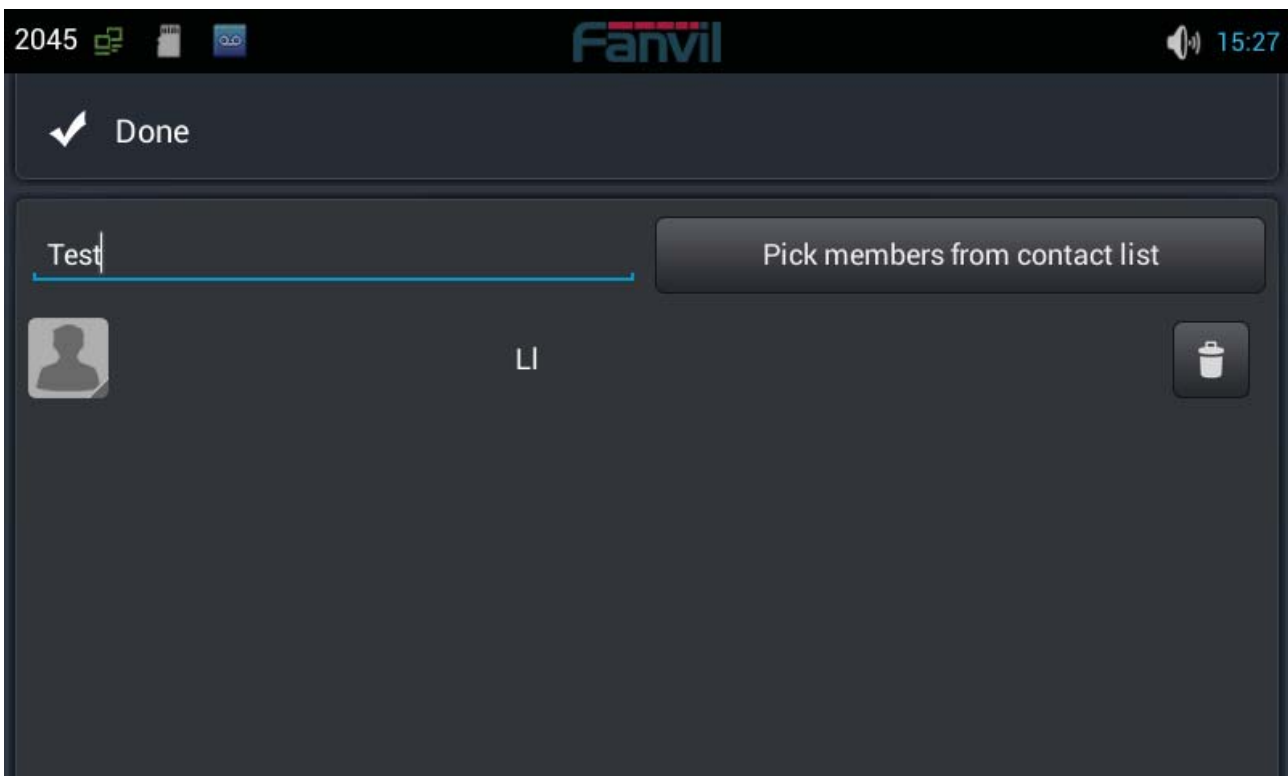

Favorite

1. Tap the “☆ Favorite” button;
2. Click “+” in the upper-right corner;
3. Select the contacts what you want to set, or click  to select all the contacts;
4. Click “confirm” to save them.


Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

Network Phonebook

Set the remote phonebook

1. Click the edit icon  in the upper-right;
2. Click URL;
3. Follow the prompts to fill in the information;
4. Click “Done” to save it.

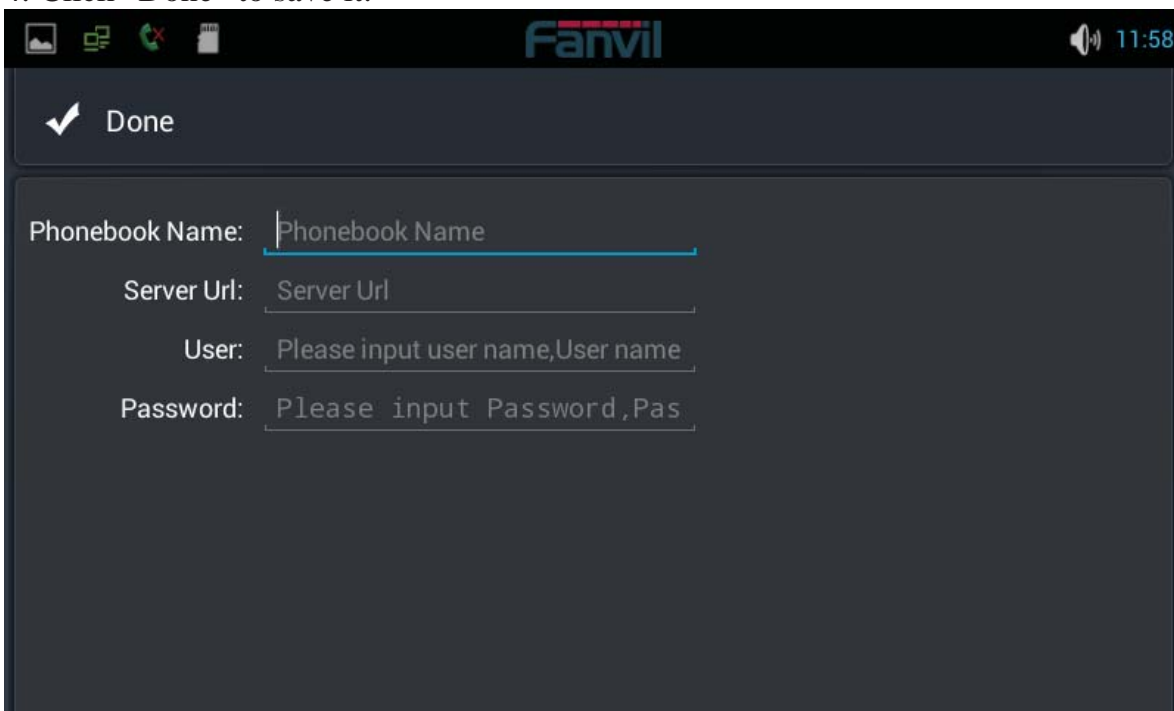

The screenshot shows a mobile application interface with a dark theme. At the top, there is a status bar with icons for home, back, and a battery level indicator, along with the time 11:58. Below the status bar, there is a header with a checkmark icon and the word "Done". The main content area contains four input fields with labels and placeholder text:

- Phonebook Name:
- Server Url:
- User:
- Password:

Set the LDAP

1. Click the edit icon  in the upper-right;
2. Click LDAP;
3. Edit the information following the prompts;
4. Click “Done” to save it.

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737



The screenshot shows the Fanvil mobile app interface for configuring SIP settings. The top status bar displays the time as 15:28. Below the status bar is a dark header with a checkmark and the word "Done". The main configuration area contains the following fields:

Display Title:	Fanvil-BJ	Use SSL:	<input type="checkbox"/>
Server Address:	172.16.1.3	Server Port:	389
Authentication:	DIGEST-MD5	Username:	may
Search Base:	dc=winline,dc=com	Password:
Telephone:	telephoneNumber	Mobile:	mobile
Other:	other	Display Name:	cn sn ou
Enable calling search:	<input type="checkbox"/>		


BlockList & CallBarring

Set the Blacklist

You can enable Blacklist, click the “+” to add number or contacts what you want. Using the same method to set the WhiteList and CallBarring.

Interception record



Click the  in the upper-right, you can see the interception record.


Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

Phone Settings

System info

Tapping “Phone Settings” can directly enter the default window “System info”. It displays the current system information state.

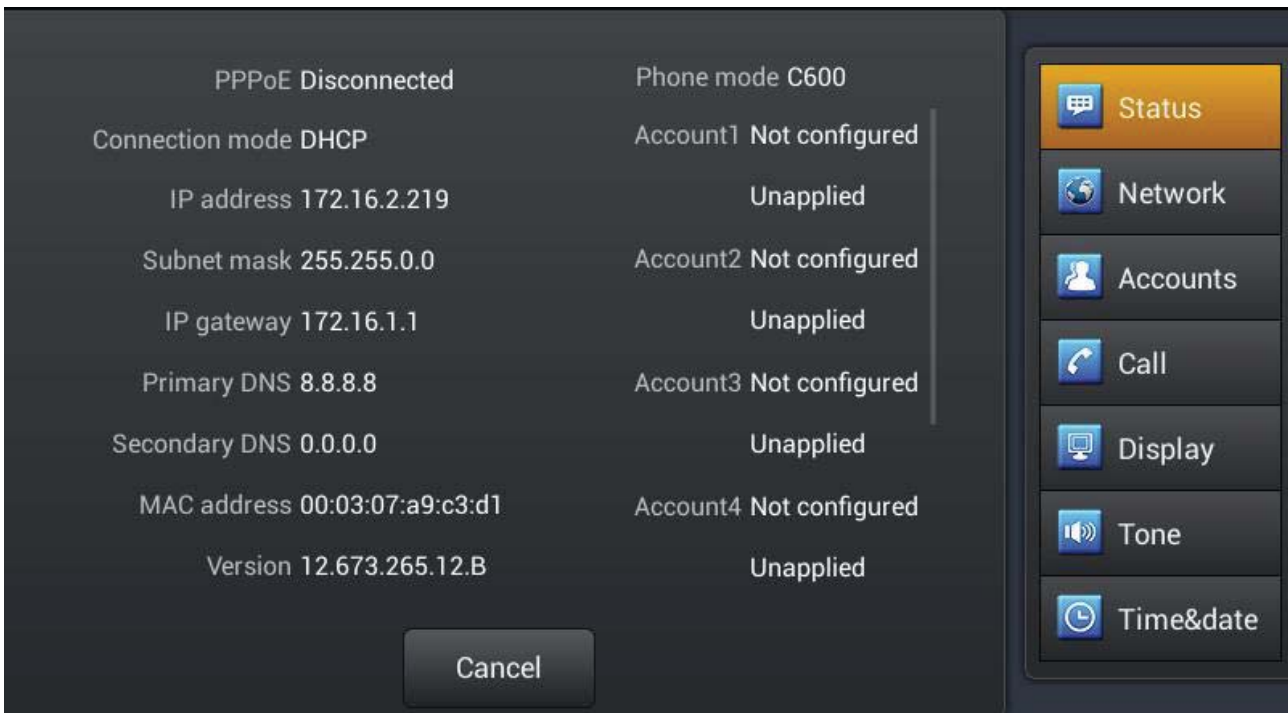

System Info Interface

Configuration item	Meaning
PPPoE	Displays the connection status of the PPPoE, there are three display states : Disabled, Connecting and the IP address.
Connect mode	Displays the selected network mode, DHCP or Static

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
 Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
 Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

	IP.
IP address	Displays the IP address of the current network model.
Subnet mask	Displays the Subnet Mask of the current network model.
IP Gateway	Displays the default gateway of the current network model.
Primary DNS	Displays the primary DNS server address of the current network model.
Secondary DNS	Displays the standby DNS server address of the current use of the network model.
MAC address	Displays the current MAC address.
Version	Displays the current version of the phone.
Phone mode	Displays the current phone model.
Account	Displays the current configuration of the Accounts and more detailed information will be displayed on the desktop widget.

Network

Network

Tap “Network”----> “WAN mode” interface, the default interface is “DHCP”: click “Save” button to save successfully after the configuration of each interface is finished. Then a tip box “Config saved” will be shown.

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

The screenshot shows the WAN configuration page with the following settings:

- Network mode: DHCP, Static IP, PPPoE
- Obtain DNS Server Automatically:
- Enable Vendor Identifier:
- Vendor Identifier: Fanvil-C600

Buttons: Cancel, Save

Right sidebar menu: Status, Network (selected), Accounts, Call, Display, Tone, Time&date

DHCP Interface

The screenshot shows the WAN configuration page with the following settings:

- Network mode: Static IP, PPPoE
- IP address: 192.168.1.179
- Subnet mask: 255.255.255.0
- IP gateway: 192.168.1.1
- Primary DNS: 8.8.8.8
- Secondary DNS: 202.96.134.133

Buttons: Cancel, Save

Right sidebar menu: Status, Network (selected), Accounts, Call, Display, Tone, Time&date

Static IP Interface


Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

Configuration	Meaning
DHCP	You can select to use DHCP, which means whether Use the DNS to connect network assigned by the DHCP server.
Static IP	IP address: Input your assigned IP address. Subnet mask: Input your assigned subnet mask. IP gateway: Input your assigned gateway. Primary DNS: Input your assigned DNS server address. Secondary DNS: Input your assigned Alert DNS server address.

PPPoE

Tap “Network” ----> “PPPoE”. After configuring the parameters, you can click “Save” button to save.

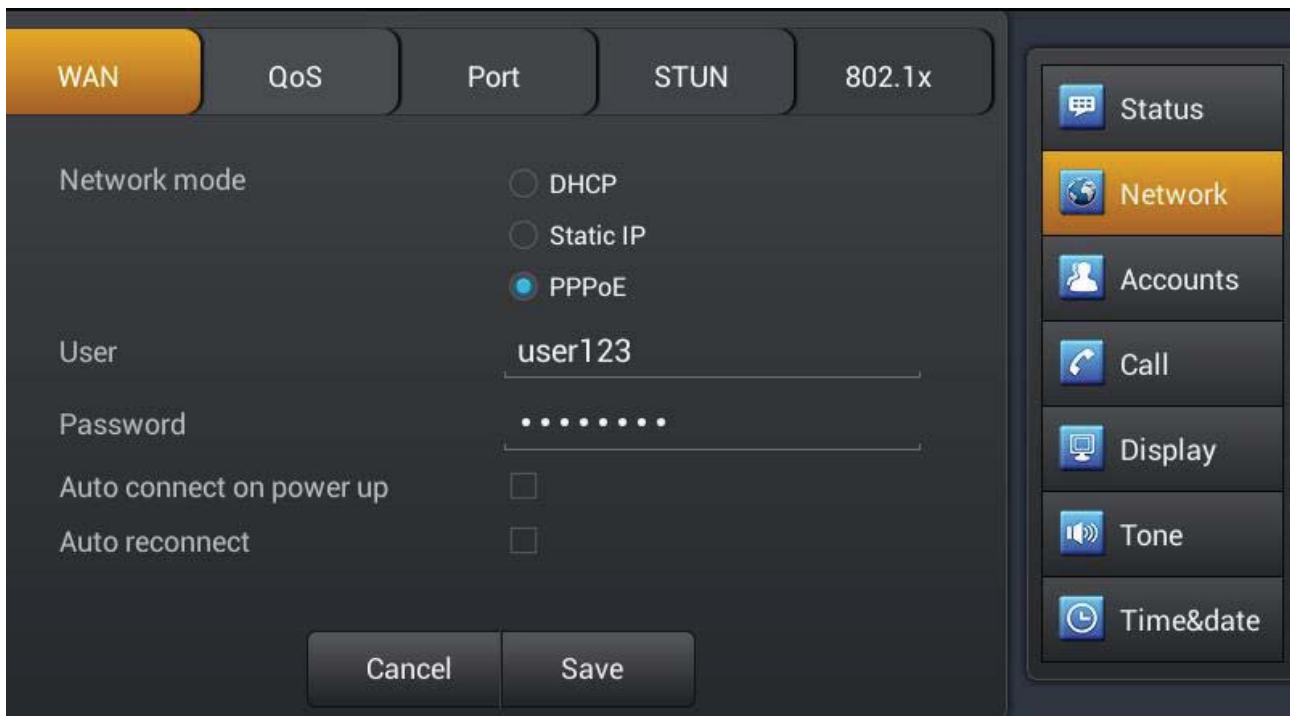

PPPoE Interface


Configuration	Meaning
PPPoE	<p>User: Input your assigned PPPoE Username.</p> <p>Password: Input your assigned PPPoE Password.</p> <p>Auto connect on power up: Whether to automatically connect PPPoE on power up.</p> <p>Auto reconnect: When connecting failed whether to automatically connect PPPoE.</p>

QoS

Tap “Network”----> “QoS”, after selecting or modifying the default settings click the “Save” button to save.

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
 Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
 Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

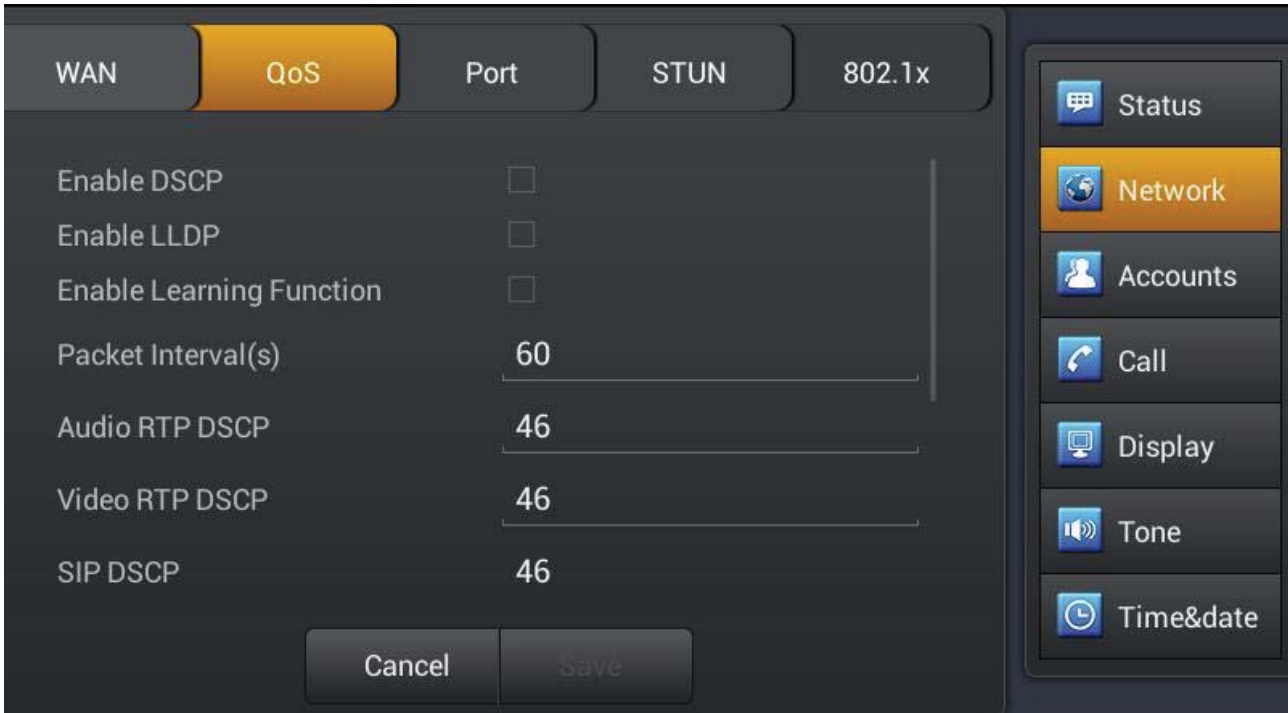

QoS-DSCP Settings

DSCP is one standard of QoS. It can set the priority of Voice, Video and Signal.

Configuration item	Meaning
QoS- DSCP	Enable DSCP: Enable/Disable DSCP.
	Voice DSCP: Set the number of Voice DSCP.
	Video DSCP: Set the number of Video DSCP.
	Signal DSCP: Set the number of Signal DSCP.

Slide down the screen to the QoS-WAN VLAN page.

VLAN is Virtual Local Area Network.

Enable VLAN, then you can set VLAN ID, the range of ID number is 0~4095, you can

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
 Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
 Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

also set the priority of 802.1P, the range is 0~7.

Note: You must enable DSCP if you want to set 802.1P priority.

Configuration item	Meaning
QoS- WAN VLAN	Enable WAN port VLAN: Enable/Disable WAN port VLAN.
	WAN port VLAN ID: Set the number of VLAN ID.
	SIP 802.1P priority: Set the priority number of SIP 802.1P priority.


Slide down the screen to QoS-Port VLAN interface.

Port VLAN is based on port VLAN, in the same VLAN port to communicate with each other.

Configuration item	Meaning
QoS- Port VLAN	Port VLAN mode: Select the status of LAN Port VLAN.
	➤ Follow WAN: Follow the ID number of WAN.
	➤ Disable: Disable Port VLAN.
	➤ Enable: Enable Port VLAN and you can set the LAN Port VLAN ID different from WAN.
	LAN port VLAN ID: Set the number of LAN Port VLAN ID.

Port

Tap “Network” ----> “Port”, after selecting or modifying the default settings click “Save” button to save.

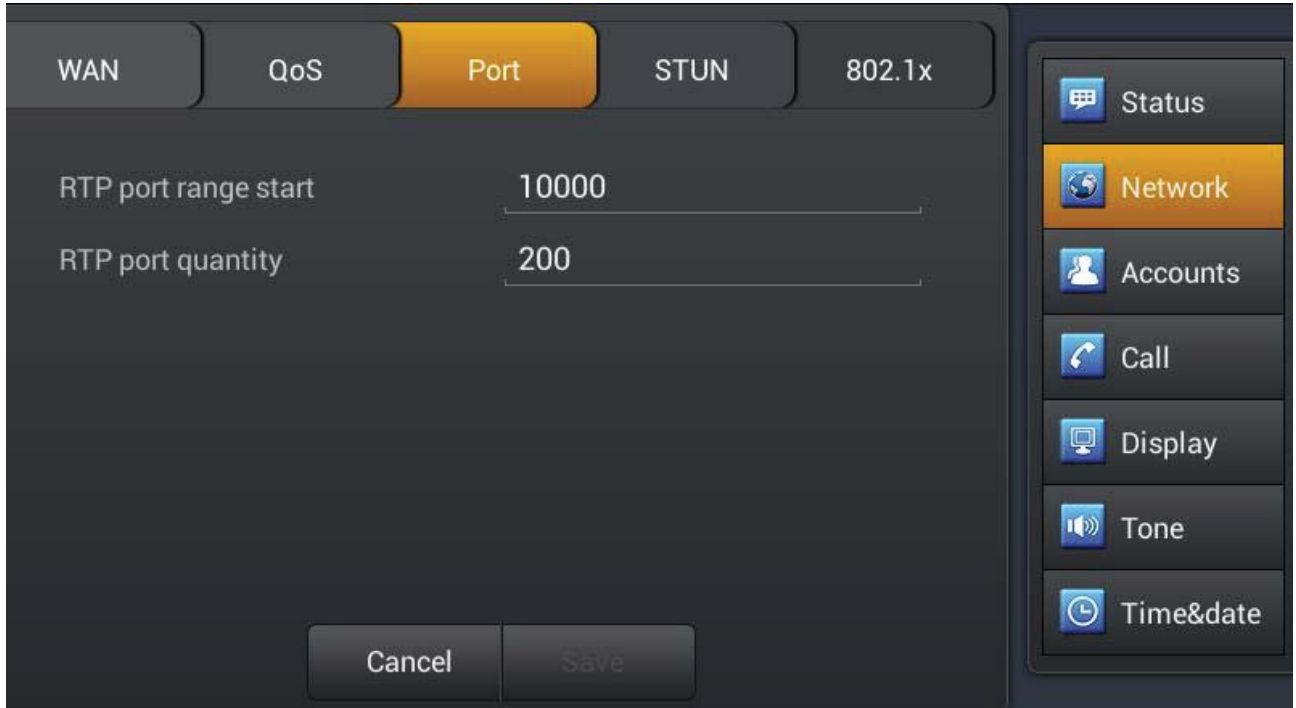

Port Settings


Configuration item	Meaning
Port	<p>RTP port range start(10000-60000): Set the telephone’s RTP start port. This port is distributed to dynamic allocation.</p> <p>RTP port quantity(100~400): Set the maximum number of allocated RTP port. The default is 200.</p>

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxingqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
 Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
 Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

STUN

Tap “Network” ----> “Stun”, after selecting or modifying the default settings click “Save” button to save.

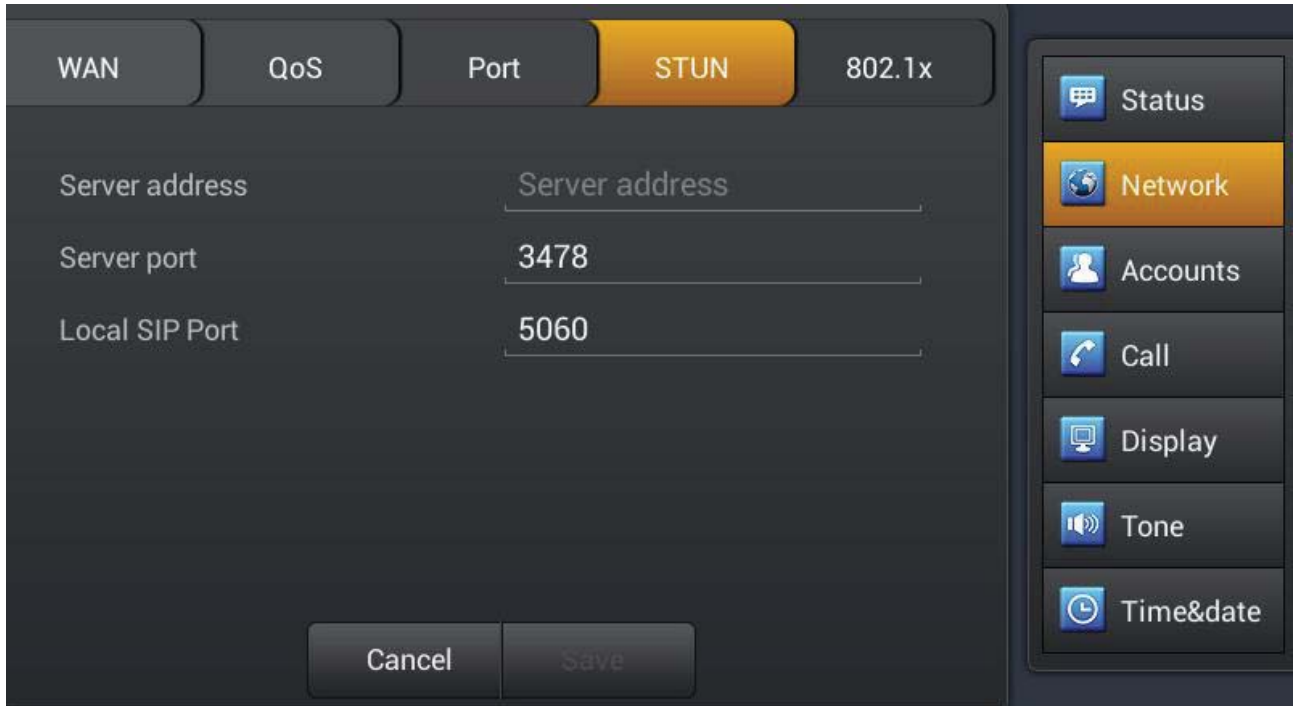

STUN Interface

Configuration item	Meaning
STUN	Server address: Configure the SIP STUN server address.
	Server port: Configure the STUN server port .The default is 3478.
	Local SIP Port: Configure the local sip port.The default is 5060.

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxingqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
 Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel:+86-10-5753-6809
 Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

802.1x

Tap “Network” ----> “802.1x”, after selecting or modifying the default settings click “Save” button to save.



Accounts


Account

Tap “Accounts”---->“Account1”, the default password is 123456, you can slide down to set more parameters follow the prompts , after all the parameters are set, you can click “Save” button to save.

(Note: The Account1, 2, 3, 4 ,5,6 has the same settings.)

Fanvil Technology Co., Ltd


HQ Add: Level 3, Block A, Gaoxing Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

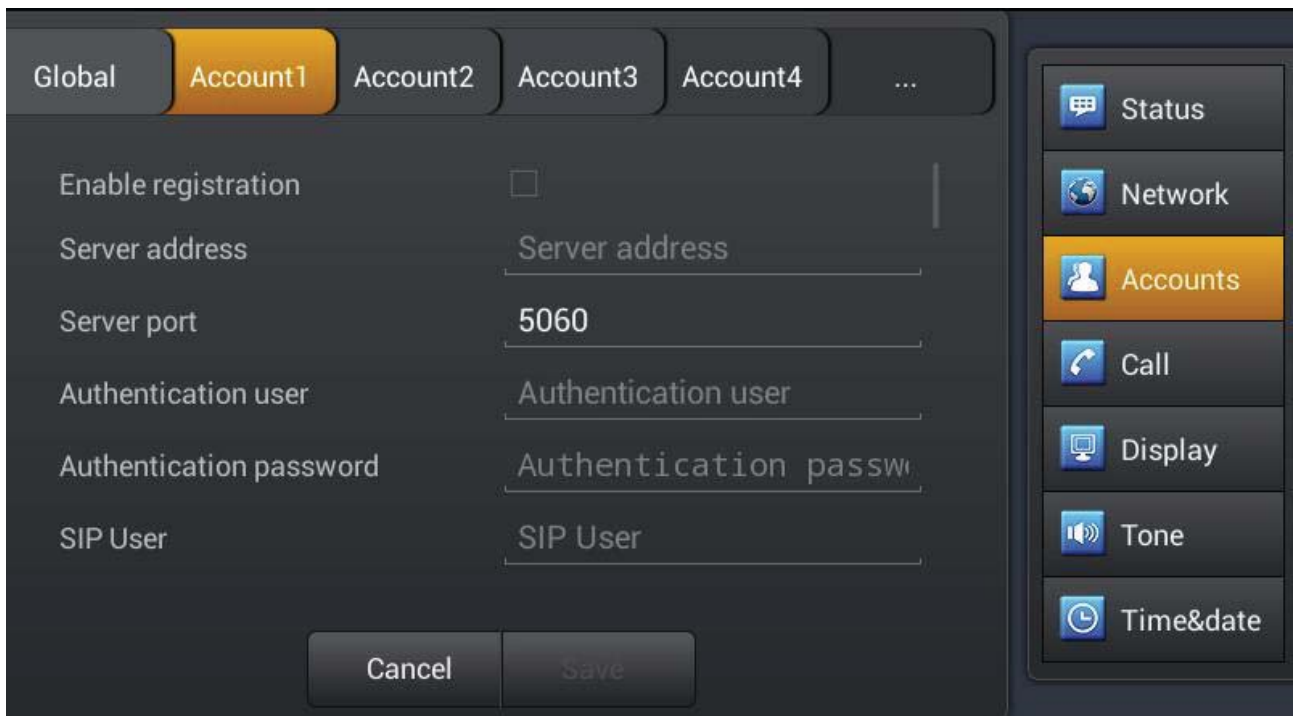

Account Page 1

Configuration item	Meaning
Account	<p>Enable registration: Enable/Disable registration.</p> <p><input type="checkbox"/> Disable register, <input checked="" type="checkbox"/> Enable register.</p> <p>Server address: Set your SIP server address. It supports the address in the form of domain name.</p> <p>Authentication user: Set your SIP account.</p> <p>Authentication Password: Set your SIP password.</p> <p>SIP user: Input the phone number assigned by your VoIP service provider. Phone will not</p>

register if there is no phone number configured.

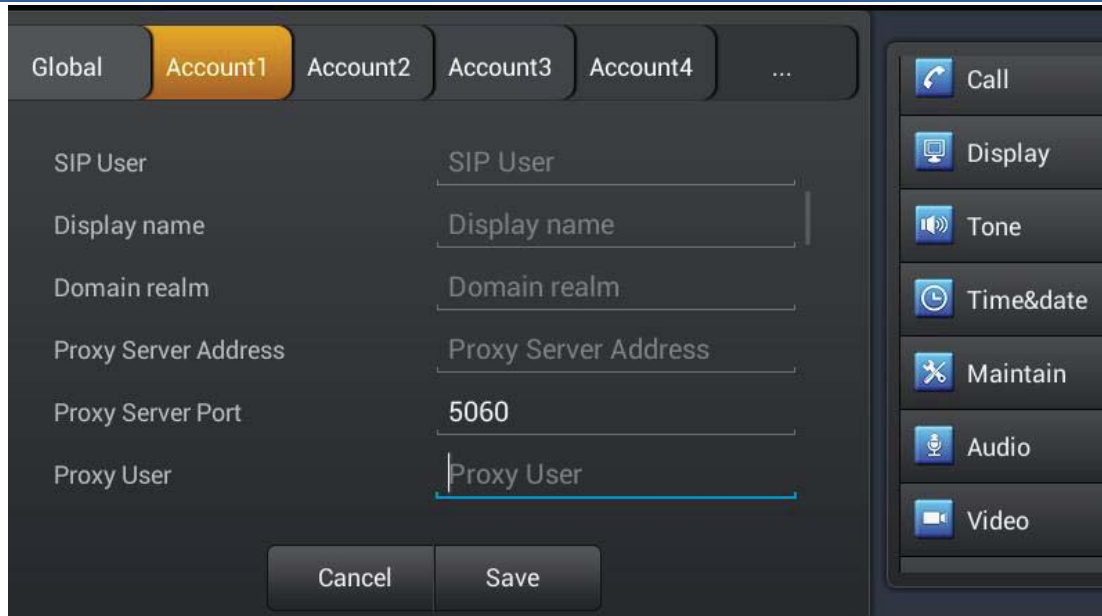

Account Page 2

Display name: Configure the display name, it allows the English alphabet input (does not support Chinese).

Domain realm: Configure the SIP domain name (You do not need to configure it because the system will configure automatically).

Proxy Server Address: Configure the proxy server address.

Proxy Server Port: Configure the proxy server address.

Backup Proxy Server Address: Configure a backup server address. When the primary server is not connected, you can use the backup server

for calling communications (The backup server can be connected only when the primary server cannot connect); When the primary server is connected, the phone will automatically switch back to the primary server to communicate.

Backup server port: Configure the backup server port.

Backup Proxy Server port: Configure the SIP register proxy server port.

Server name: Configure the SIP register server name.

Registration expire(s): Configure the server registration expire(s), default is 3600 seconds. If the registration time of the server required is greater or less than the time of the phone to configure, telephone can automatically modify to the time limit that server recommended, and register again.

DTMF Type: Set DTMF mode, there are four types:

In-band

RFC2833

SIP_INFO

AUTO

Different server vendors can provide different

models.

RFC protocol edition: Configure the protocol version of the phone. When your phone needs to communicate with gateway which uses SIP1.0, such as CISCO5300, you need to configure to RFC2543 to conduct normal communication. RFC3261 is used by default.

Anonymous call edition: Configure whether to use anonymous security call. It supports RFC3323 and RFC3325.

Transport protocol: Configure the transport protocol, TCP, UDP or TLS.

Ban anonymous call: Configure whether to ban anonymous call.

Enable strict proxy: Compatible with special server. (Using source address of opposite side when return message, no longer use the address in via field).

Subscribe for MWI: After successful registration, you can subscribe to information, such as someone else's status or voice mail and so on.

Enable Rport: Configure whether to support RFC3581, Rport mechanism is used in internal network, and requires a SIP server to support, it

is used for keeping the NAT connect of the internal network and the external network.

Enable PRACK: Configure whether to support SIP-PRACK function (used by “Color Ring Back Tone”).

Recommend: Use the default configuration.

Convert URI: When you send URI it will convert # to %23.

Enable DNS SRV: Configure whether to enable RFC2782 protocol edition.

Enable displayname quote: Set to make quotation mark to display name as the phone sends out signal, in order to be compatible with server.

Use STUN: Enable/Disable SIP STUN.

Enable BLF List: Enable/Disable BLF List.

BLF list number: Input the number of BLF List.

Enable session timer: Enable/Disable session timeout.

Session timeout(s): Set the time of session timeout.

Enable XferBack: This feature is enabled by default. A call is transferred from others, when “XferBack time” timeout or refused to answer , the call will be transferred back to Transfer.

Use Tel Call : Enable this function ,if you dial 411,the request-url of invite show tel:411.

Global

Tap “Accounts”---->“Global”, you can slide down to set more parameters follow the prompts , after all the parameters are set, you can click “Save” button to save.

Strict Branch ----The value of the branch must be after “z9hG4bK” in the VIA field of the INVITE message received, or the phone will not respond to the INVITE.

Enable Group ---- Enable SIP Group Backup. This will affect all lines.

Enable RFC4475---- Enable this function, The call would be established that the special characters with the display name in the Invite message must be enclosed in double quotation marks

Disable this function, Regardless of whether the display name has the space and the double quotation marks , can normally set up a call.

Registration Failure Retry Time----If registration failed, the phone will attempt to register again after registration failure retry time.


Enable Strict UA Match---- The call would be refused if received the invite in the request url is not registered in the SIP Line.

Call

Tap “Call” enter the interface, after configuring the parameters of each interface, you can click “Save” button to save.

General

Tap “Call”---->“General” interface, after configuring the parameters, you can click “Save” button to save.

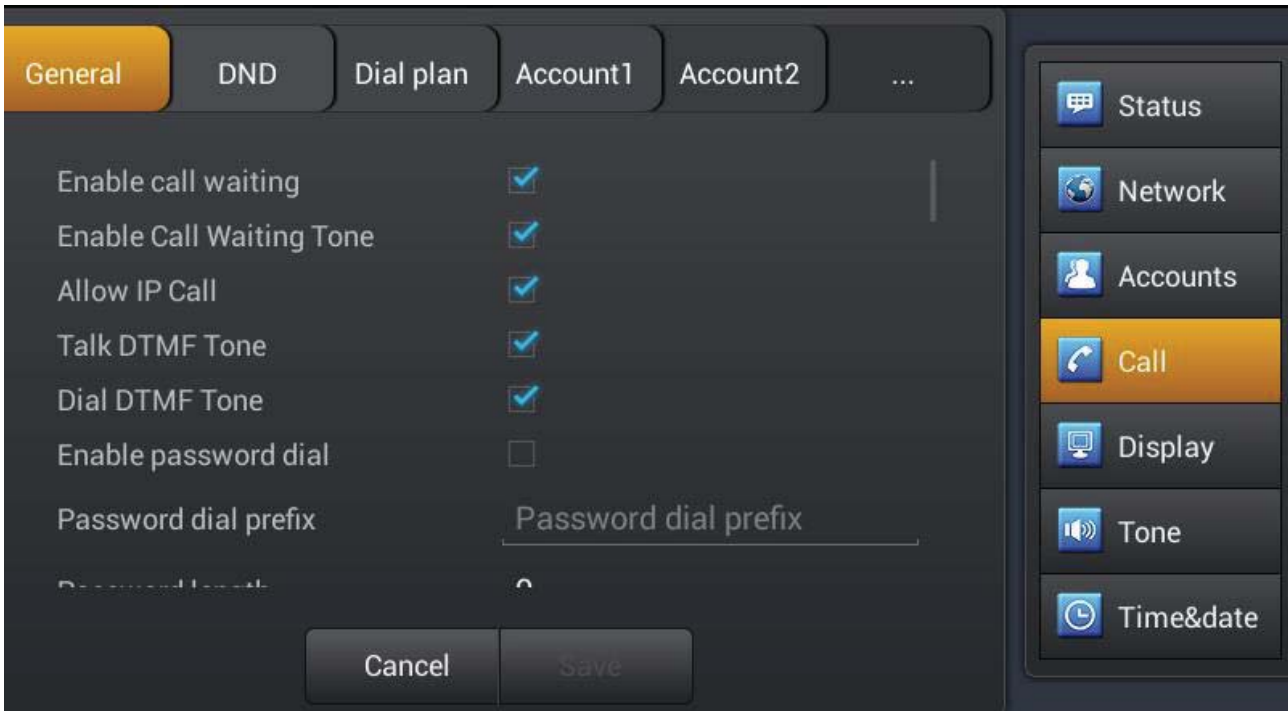

General Interface

Configuration	Meaning
Do not disturb:	It will not allow any phone call while enable the function, but there will have prompt in the missed calls.
Enable call waiting:	Whether enable call waiting.
Call waiting tone:	If enable the function, there will have call waiting tone if there has a call waiting.
Allow IP Call:	Allow IP direct call, or disable IP call for dialing.
Talk DTMF Tone:	Allow DTMF voice played during

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
 Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
 Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

talking, or only send DTMF without local play.

Dial DTMF Tone: Enable dialing DTMF tone played, or disable for dialing DTMF tone played.

Enable password dial: Whether enable the password dial.

Password dial prefix: Set the prefix of the number.

Password length: After setting the length successfully, the number dialed out will hide the appropriate length. For example, sets the prefix number to 138, the password length is 5, and dial the number 138142658941, then it will display as 138*****8941 on the dial interface.

Hide DTMF: It has four choices: Disable, All, Delay and Last show.

Disable that is the content you input is clear text and it can be seen.

All that is the content you input is hidden immediately and displayed as “*”.

Delay that is the content you input will display in clear text first and then displayed as “*”.

Last show that is the last one inputted will displayed in clear text and the others will displayed as “*”.

Ban outgoing: Forbid call out.

Enable call transfer: Enable/Disable the function, if disable the function, the phone can not do transfer .

Semi-attended transfer: During the talk, press Transfer firstly, and then press Send after inputting the number that you want to transfer to. You are waiting for connection, now, press “Transfer” and the transfer will be done. (To use this feature, you need enable call waiting and call transfer first).

Enable Auto on Hook: Enable this function, and set the auto on hook time, the phone will auto return to previous interface after the time when end a call.

Enable 3-way Conference: You can make a conference when enable this function.

Enable call completion: Enable Call Completion by selecting it, if the callee is busy, the sip server will inspect the callee status at intervals. If the callee is idle, the server will send notify message to inform the caller whether redial.

Enable auto redial: Enable this function, calling out someone, if he is in busy, it will pop up a prompt box whether to auto redial, press OK, the phone will call out him according the Interval and Times that you set.

Auto redial interval: Specify the Auto Redial interval.

Auto redial times: Specify the Auto Redial times.

Enable intercom: Enable Intercom Mode by selecting it. Then you can set up connection to the operator or the secretary quickly, and it widely used in office environments.

Enable intercom mute: Enable mute mode during the intercom call.

Enable intercom tone: If the incoming call is intercom call, the phone plays the intercom tone.

Enable intercom barge: Enable Intercom Barge by selecting it, the phone auto answers the intercom call during a call. If the current call is intercom call, the phone will reject the second intercom call.

Update dial call: Enable this function, the phone will update the peer display name based on the 200OK

packet.

Enable Multi Line: Enable phone to make calls for 10 lines max, or disable for 2 lines max.

Active URI Limit IP: IP address of the server for the Action URL messages described below.

Memroy Key to BXfer: Enable this function, can use the function keys to blind transfer.

Enable CallLog: Enable this function, the phone can see call records.

Ring from headset: Enable Ring From Handset by selecting it, the phone plays ring tone from handset.

Enable Hide Local Area Code: Enable/Disable the function, if enable the function it will hide the local number.

Auto Hold: when you call or receive the second way calls, the phone will hold the first way call.

Country code: Input the country number, such as the number of China is 86.

Area code: Input the region number, that is the area number ,for example ,the number of Beijing is 10.

Call Waiting Code: You can choose the Call waiting response, 180 or 182.

Default Ext Line: You can select any sip to be the default line, the number will display in the upper-left.

Default Dial Mode: Choose the default mode when you call other.

Default Ans Mode: Choose the mode how you receive the call.

Enable Record: You can record the conversation when enable this function.

Use SIP numbering plan: Enable this function, you can register the sip number with letters and characters.

Configure Emergency Number: You can configure one or more number here, and call them even if the screen

lock.

Enable 3rd IM App: Enable this function, you can install the third instant messaging app.


IM App: If you select the third app, when you press Headset/Handsfree key, the phone will use the app to make a call.

Offhook to open app : If you select the third app, when you pick up handset, the phone will use the app to make a call.

Supported 3rd IM Set: The third instant messaging app set.

DND

Tap “Call”----> “DND” interface. After configured the parameters, you can click “Save” button to save.

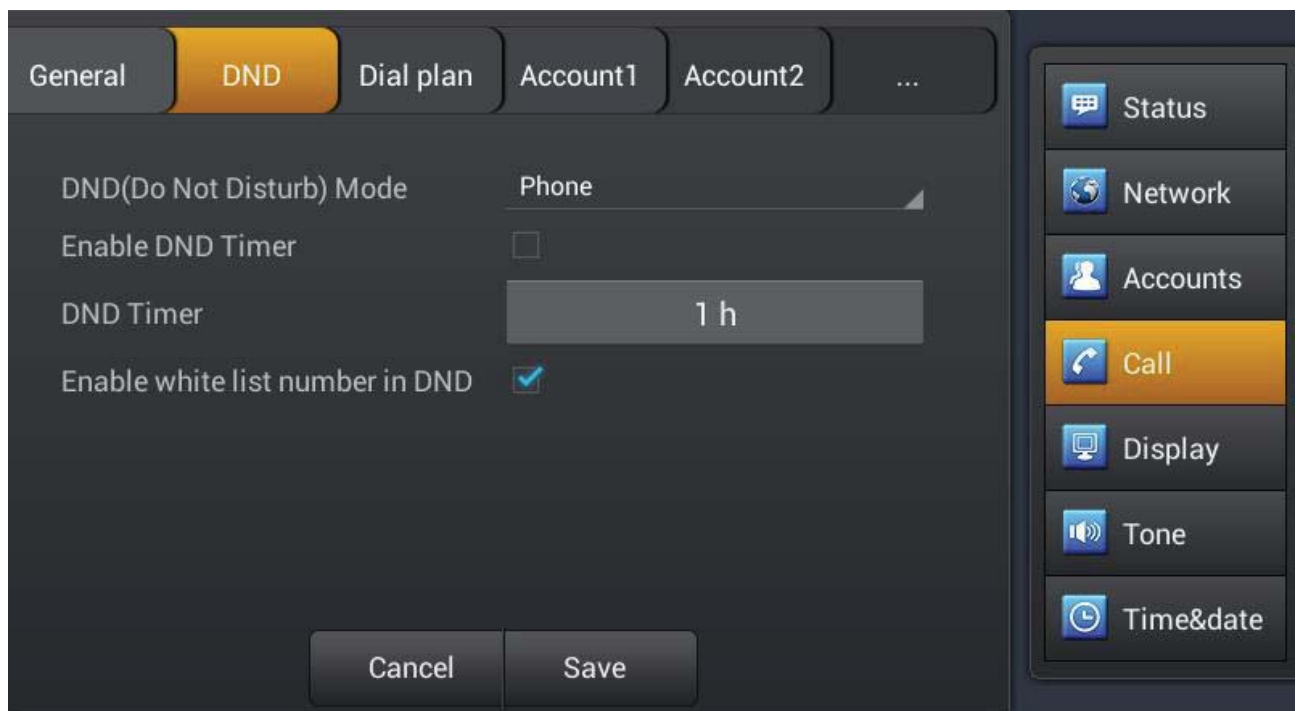

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

DND(Do not disturb) Mode: Off , Phone and Line.


- Off: Accept any incoming call.
- Phone: The phone will reject any incoming call, the callers will be reminded by busy, but any outgoing call from the phone will work well.
- Line: The phone will reject any incoming call to this SIP account when you enable “DND Line”.

Enable DND Timer: The phone will automatically close DND After DND Timer.

Enable white list number in DND: Enable this feature to allow incoming the white list number.

Dial plan

Tap “Call”---->“Dial plan” interface. After configuring the parameters, you can click “Save” button to save.

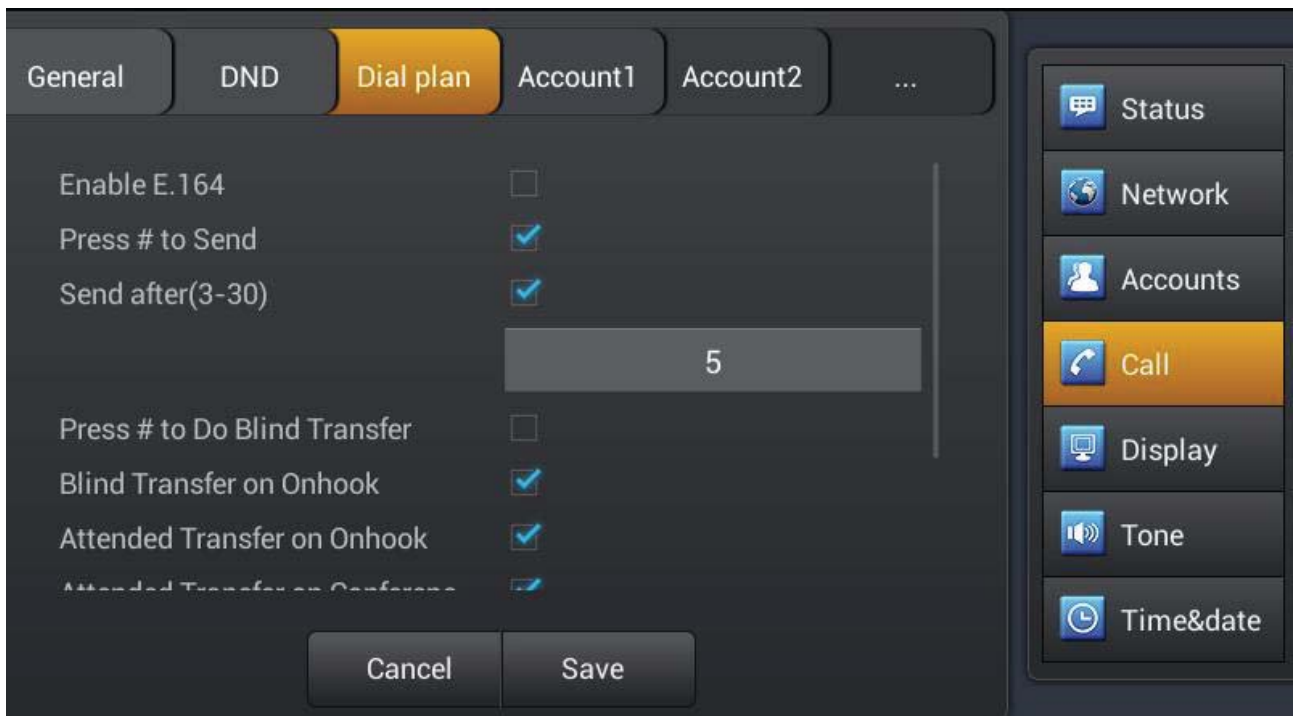

Dial Plan Interface

Configuration item	Meaning
Dial plan	<p>Use E164: Enable/Disable E164. After it is enabled, it will directly dial numbers according with E164 rules.</p> <p>Press # to Send: Enable/Disable. After enabling the function, input the number end with “#” in the non-pre-dial mode, it will directly dial the phone number.</p> <p>Send after(3-30): Enable/Disable. After enabling the function, pre-dial mode to set the length of the</p>

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
 Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
 Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

input number is automatically closed.

Press # to Do Blind Transfer: Enable/Disable.

After enable this function, when you do a blind transfer, you can input number end with “#” do send it.

Blind Transfer on Onhook: Enable/Disable. After enable this function, when you end input the transfer number, you can directly on hook the phone to do the blind transfer.

Attended Transfer on Onhook: Same as above, but do the attended transfer.

Attended Transfer on Conference: Enable this function, when you host a 3-way conference, you can on hook to do the attended transfer.

Dial prefix: Enable/Disable. After enabled the function, it will be automatically added the outside line prefix number before the outgoing number when you are going to call.

Method to use the prefix: Example.


If you set the prefix is 135856, and you want to dial the number 13585679801. Then when you dial

the number, you can press and hold 0, when the “+” appears, you can just input 79801 and send the number, the “+79801” is the number you input, but you can see the dialing number is 13585679801.

Custom dialing rules: This feature allows the user to create rules to make dialing easier.

Account

Tap “Call”---->“Account1\2\3\4\5\6” interface, after configuring the parameters, you can click “Save” button to save.

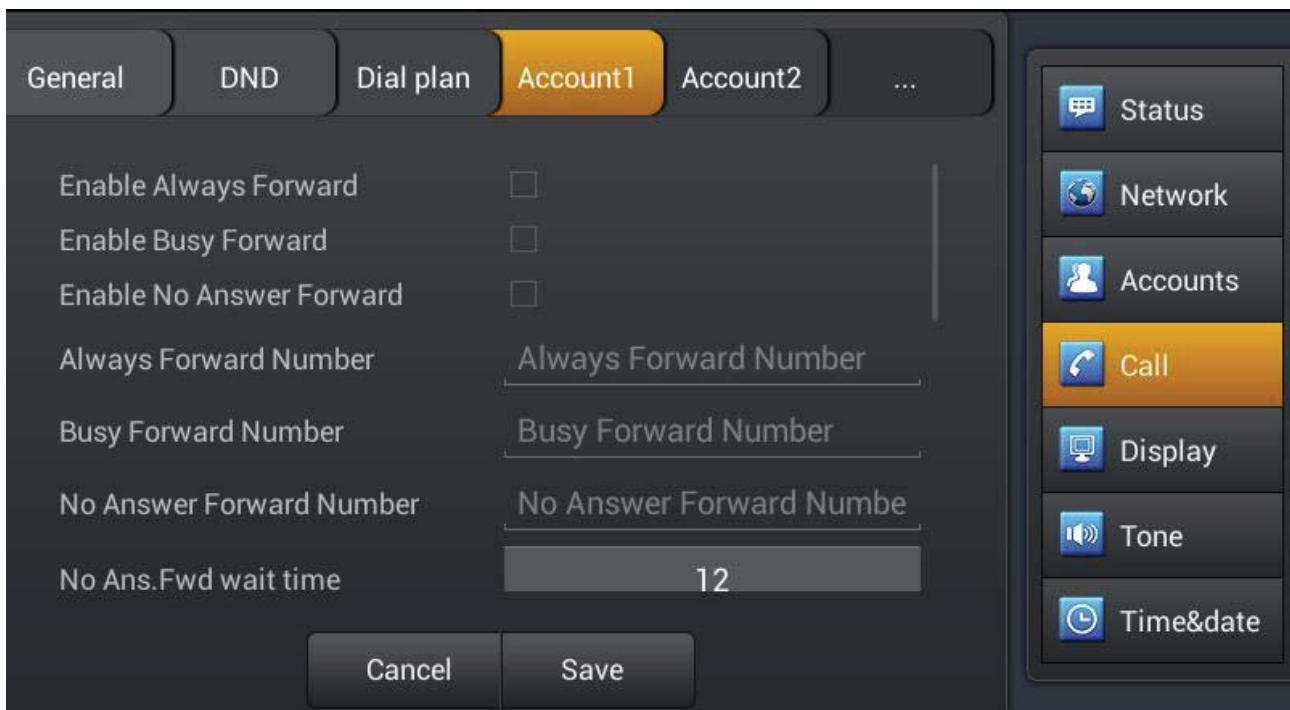

Account 1

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

Configuration	Meaning
Account 1	Enable Always Forward: Set the forward number below and enable this function, when it has a coming call, the phone will forward the call to the setting number and display one missed call.
	Enable Busy Forward: Same as the above function, but when the phone has one call it can forward the incoming call.
	Enable No Answer Forward: Same as the above, when the phone does not answer the call after timeout, it will forward the incoming call.
	MWI number: Fill in the MWI number.
	Enable Hotline: Enable this function, configure the hotline number and time, the phone will auto call this number when enter the dialing interface and timeout.
	Enable auto answer: Enable auto answer and set the timeout, when the phone has incoming call, it will auto answer when time out.
	Enable missed call log: Enable this function, the status bar has prompt when missed incoming calls and save them to call log history.
	Select Line Tone: Set each SIP Line rings.
	Caller ID Type: It is default display long number, and support standard ISP number .If not enable, the phone


will display last few numbers matched.

Enable user=phone: Enable this, the phone can make call directly, if not, you need to precede the phone number with country code and Area code, depending on your environment.

Dial without registered: Set call out by proxy without registration.

Display

Tap “Display” ---->“Display” interface. After configuring the parameters, you can click “Save” button to save successfully.

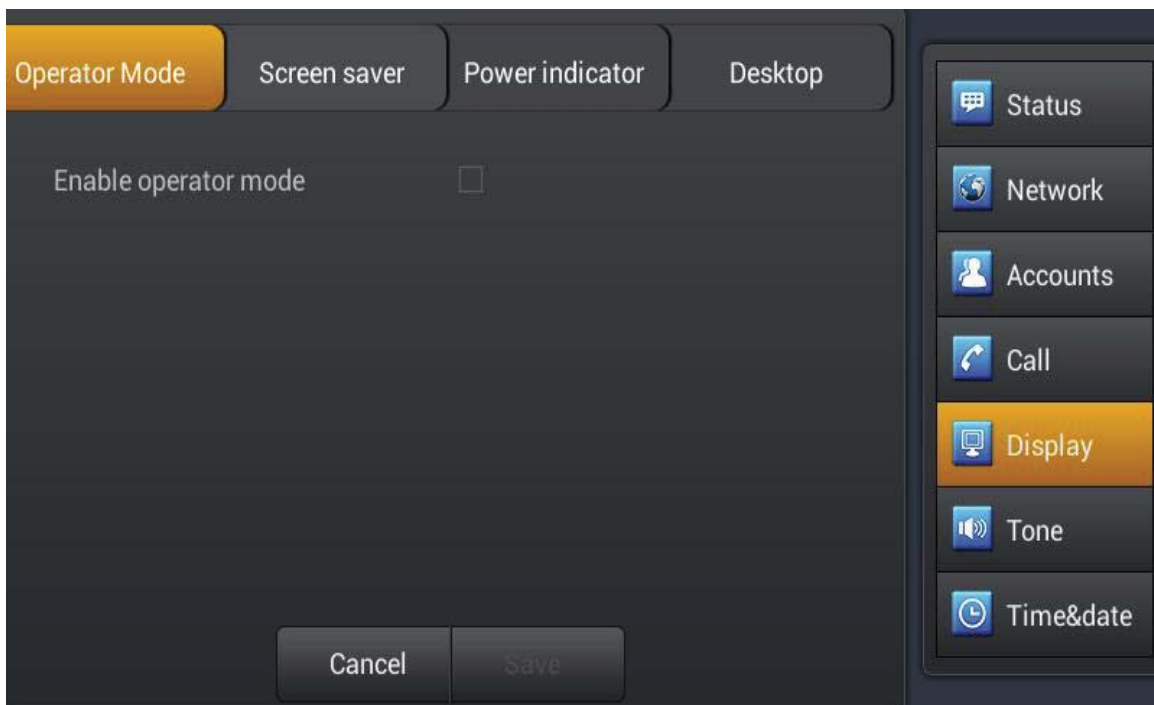

Configuring the phone screen displays a number of parameters, including Operator

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

Mode, Screen savers, Power indicator and Desktop.

➤ **Operator Mode**

After enable operator mode, if you press the home key, the main interface will enter dsskey interface. If disable this function, the phone will return to desktop interface when press home key.

➤ **Screen saver**

Field Name	Explanation
Sleep operation	Sleep mode: Disabled, LCD power off and Start screen saver.
Timeout to sleep	Set the sleep timeout.
ScreenSaver after active	Whether to enable the screensaver timeout.
Timeout to ScreenSaver	Set the screen saver timeout.
Daydream	Set the screen saver application.

➤ **Power indicator**

Field Name	Explanation
Turn off Power Light	Disables Power Light if selected.
Enable Messaging Indicator	SMS indication is 1000ms On 1000ms Off – The SMS will show the Messages left in the box. After Access the SMS, the LED will be no lights.
Enable Voice Mail Indicator	MWI indication is 1000ms On 1000ms Off – The MWI will show the Messages left in the box. After Access the MWI, the LED will be no lights.
Enable Misse Call Indicator	Miss Call indication is 400ms On 400ms off – The Call log will show the Miss call counted. After access the Call log keys, the LED will be no lights.

➤ **Desktop**

When enable shortcuts and widgets, you can press and hold the application to set shortcuts to desktop.


Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
 Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
 Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

Tone

Configuration of the telephone voice parameters, including selecting a ringtone, SMS notification tones, keypad tones, and other.

Tap “Settings” ---->“Tone” interface. After configuring the parameters, you can click “Save” button to save successfully.

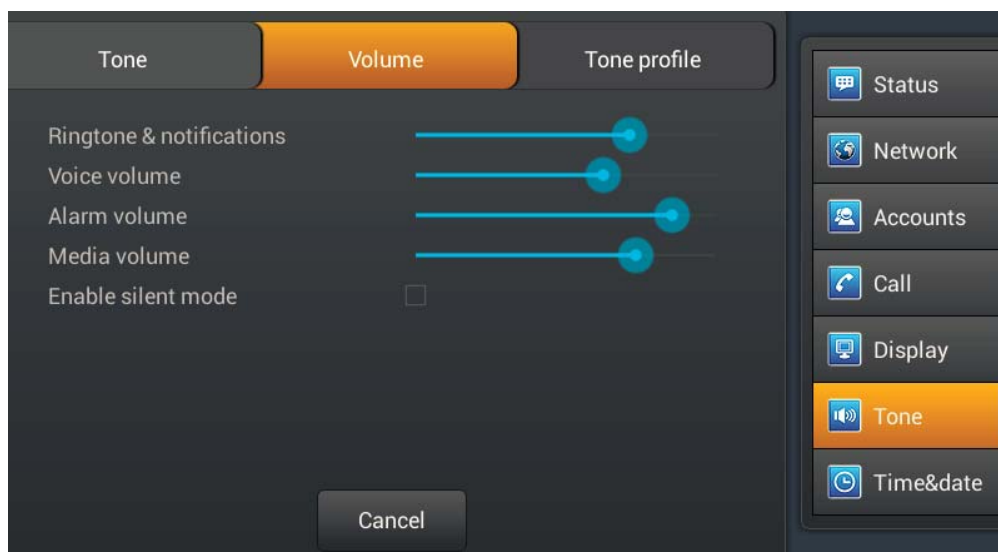

Time&date

Tap “Settings” ---->“Time&date” interface. After configuring the parameters, you can click “Save” button to save successfully.



Field Name	Explanation
Simple Network Time Protocol (SNTP) Settings	
Enable SNTP	Enable or Disable SNTP.
Primary Server	IP address of Primary SNTP Server.
Time Zone	Local Time Zone.
Time format	If checked use 12-hour clock, clock is 12 hour mode. If checked use 24-hour clock, clock is 24 hour mode. Default is 24 hour mode.
Date Separator	Four date separators are available: /, - , . , space.
Manual Time Settings	
Select the values for the current year, month, day, hour and minute. All values are required.	
Note: Be sure to disable SNTP service before entering manual time and date.	

Maintain


Tap “Settings” ---->“Maintain” Enter the interface.

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
 Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
 Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

Service port

Tap “Maintain”---->“Service port” interface. After configured the parameters, you can click “Save” button to save successfully.

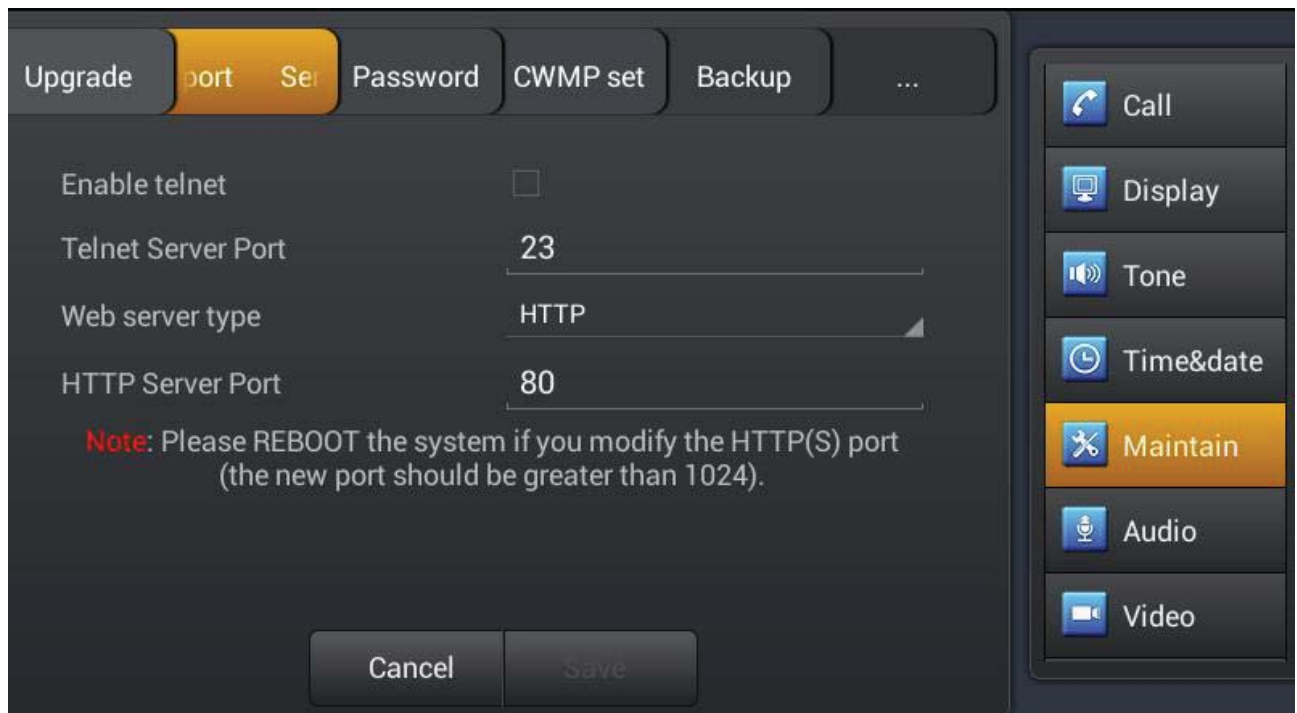

Service Port Interface

Configuration	Meaning
Service port	<p>Enable telnet: Open telnet function.</p> <p><i>Telnet</i> is a common method of remote control of the Web server, end users can enter the command telnet program, these commands will be run on the server, just like directly on the server console, enter the same. Can locally be able to control the server.</p>

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxingqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
 Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
 Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

Telnet Server port: Input telnet port ,default is 23.

Web server type: Select “HTTP” or “HTTPS”.


After selecting one server, you can use the selected server to login the telephone’s web page.

Such as: https://192.168.1.20.

HTTP port: Input server port, default is 80.

CWMP set


Tap “Maintain”---->“ CWMP set” the default password is 123456, enter the CWMP set interface ,interface. After configured the parameters, you can click “Save” button to save successfully.

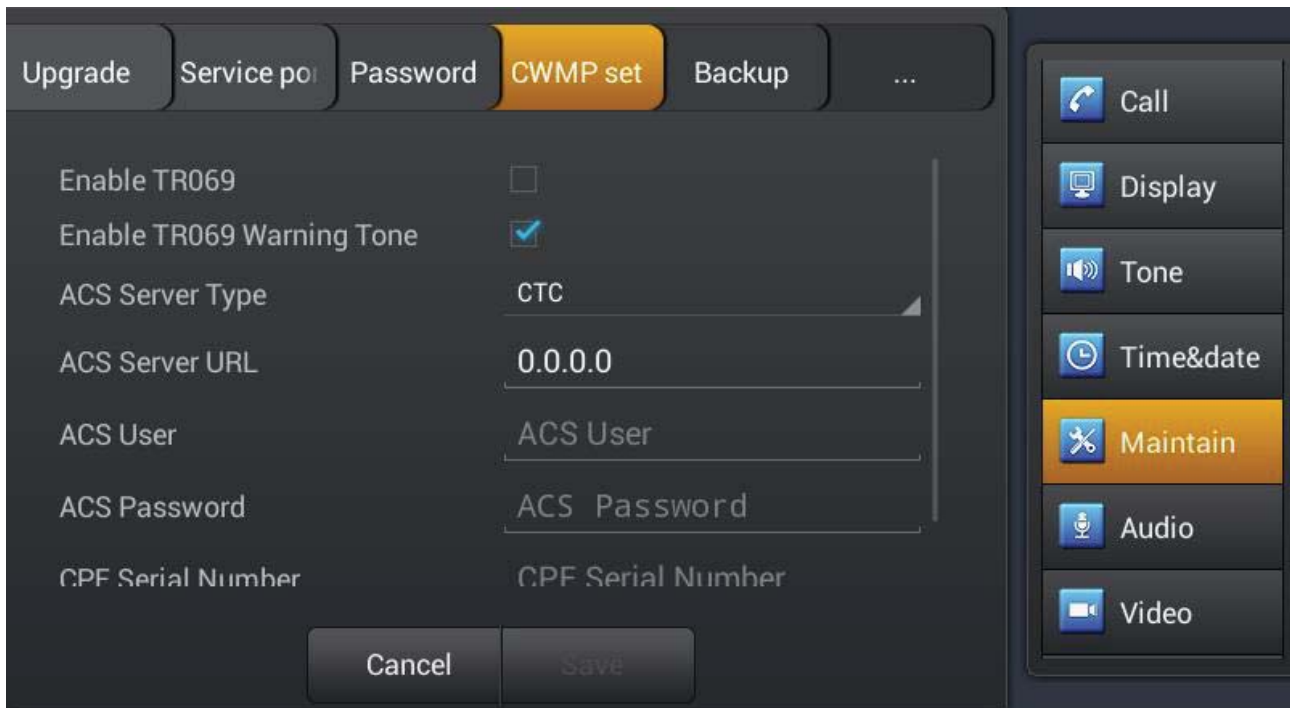

CWMP Set Interface 1

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

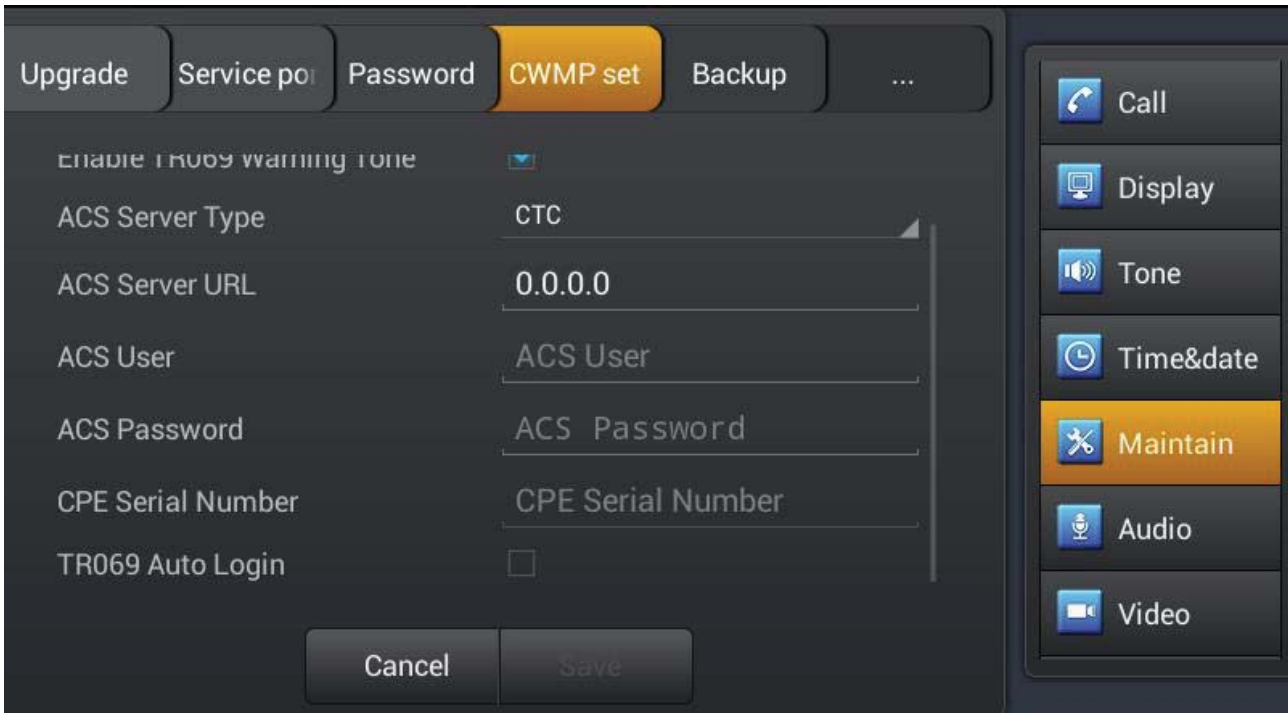

CWMP Set Interface 2

Configuration	Meaning
	Enter the password to access the network menu landing configuration interface.
	Enable TR069: Enable network mode, select China Telecom or Normal.
CWMP set	ACS Server: Input the address of the ACS server provider.
	Account: Input service provider assigns the account.
	Password: Input the account corresponding password.
	Serial Number: Input the Serial number.
	Auto connect: When enabled, you can fill out the account and password.

Backup

Tap “Maintain”---->“ Backup” , the default password is 123456, enter the backup interface.



Backup Interface

Configuration	Meaning
Backup	Backup: The contact data, phone settings data and calender backup to a specified folder. Recovery: Recovery has backup contacts, phone settings configuration.

Phone Reset

Tap “Maintain”---->“ Phone Reset”, the default password is 123456, enter the Phone Reset interface.


Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

Clear all: This will restore factory default and remove all configuration information.

Clear all but keep SIP account: This will restore factory default and remove all configuration information but keep SIP account.

Clear all but keep SIP account, Dial Plan and DSS Keys: This will restore factory default and remove all configuration information but keep SIP account, Dial Plan and DSS Keys.

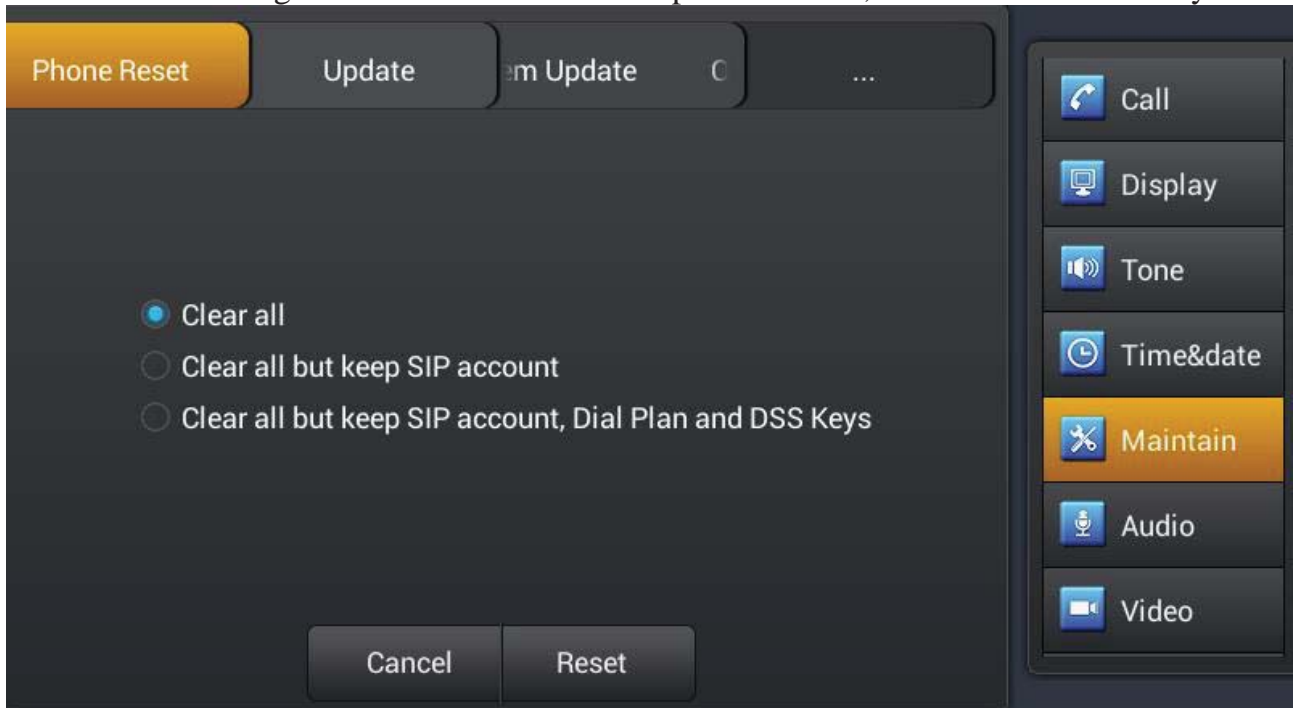


Update

Tap “Maintain”---->“ Update”, enter the update interface.

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

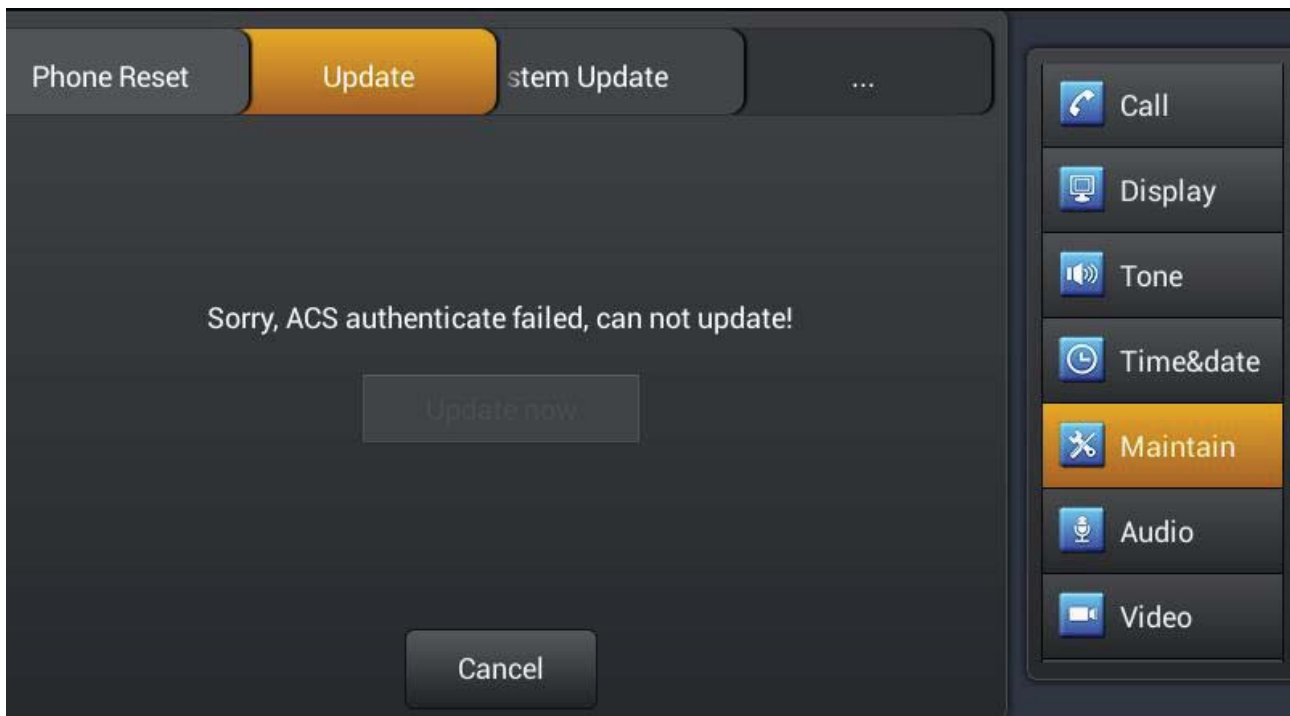

Update Interface

Configuration	Meaning
System update	For ACS certification, authentication is successful you can check the system updates.


OTA System Update

Support the OTA upgrade

Note: only support upgrade “.zip” format.

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxingqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
 Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
 Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

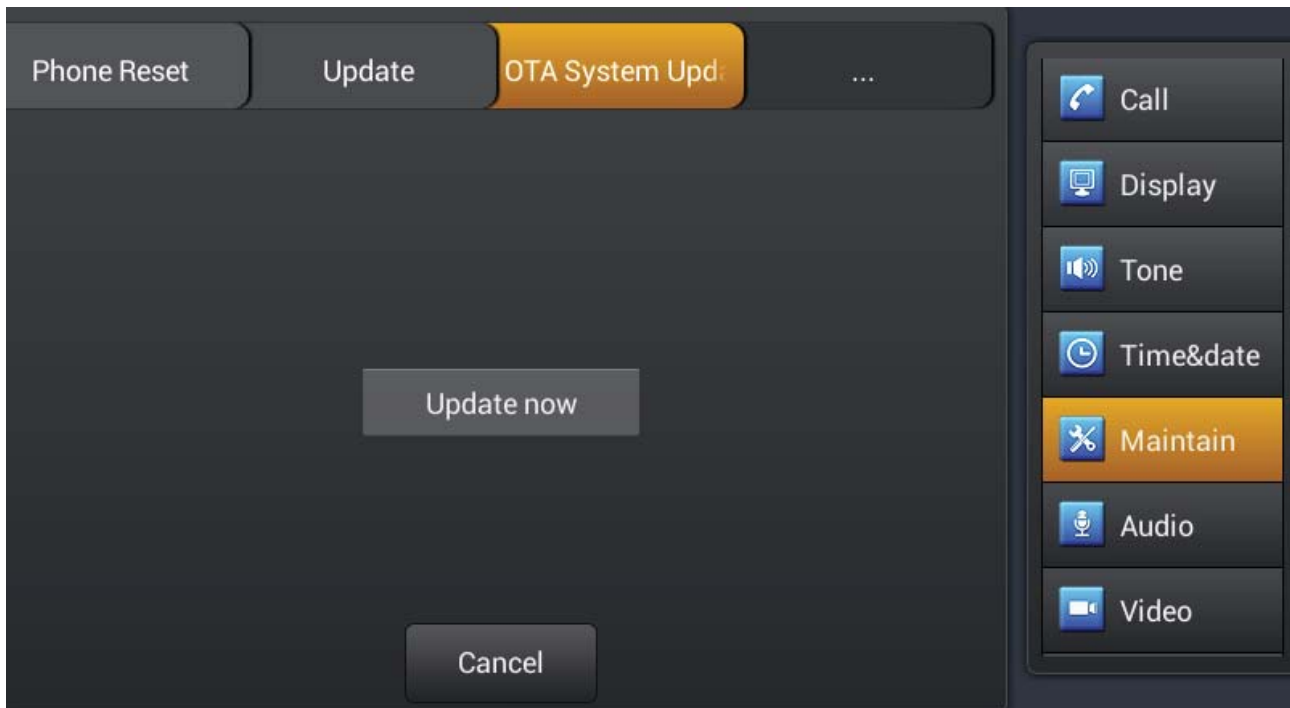

Audio

Touch “Settings” ----> “Audio”, enter the detailed view.

Audio

Touch “Audio”----> “Audio” interface. This is global setting, applies to all the sip lines.
After configuring the parameters, you can click “Save” button to save successfully.



Audio Interface

Configuration item	Meaning
Audio	Enable VAD: Whether to enable VAD. (Voice Activity Detection)

Audio param

Touch “Audio”----> “Audio param” interface. After configuring the parameters, you can click “Save” button to save successfully.



Audio Param Interface

Video

Touch “Settings” ----> “Video” and enter the settings interface.

Video param

Touch “Video”----> “Video param” interface. After configuring the parameters, you can click “Save” button to save successfully.

Note: If you want More clear and smooth video screen, please select H.264 within 2M bandwidth.

Fanvil Technology Co., Ltd


HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737



Video Param Interface

Bandwidth

Touch “Video”----> “Bandwidth” interface. After configuring the parameters, you can click “Save” button to save successfully.

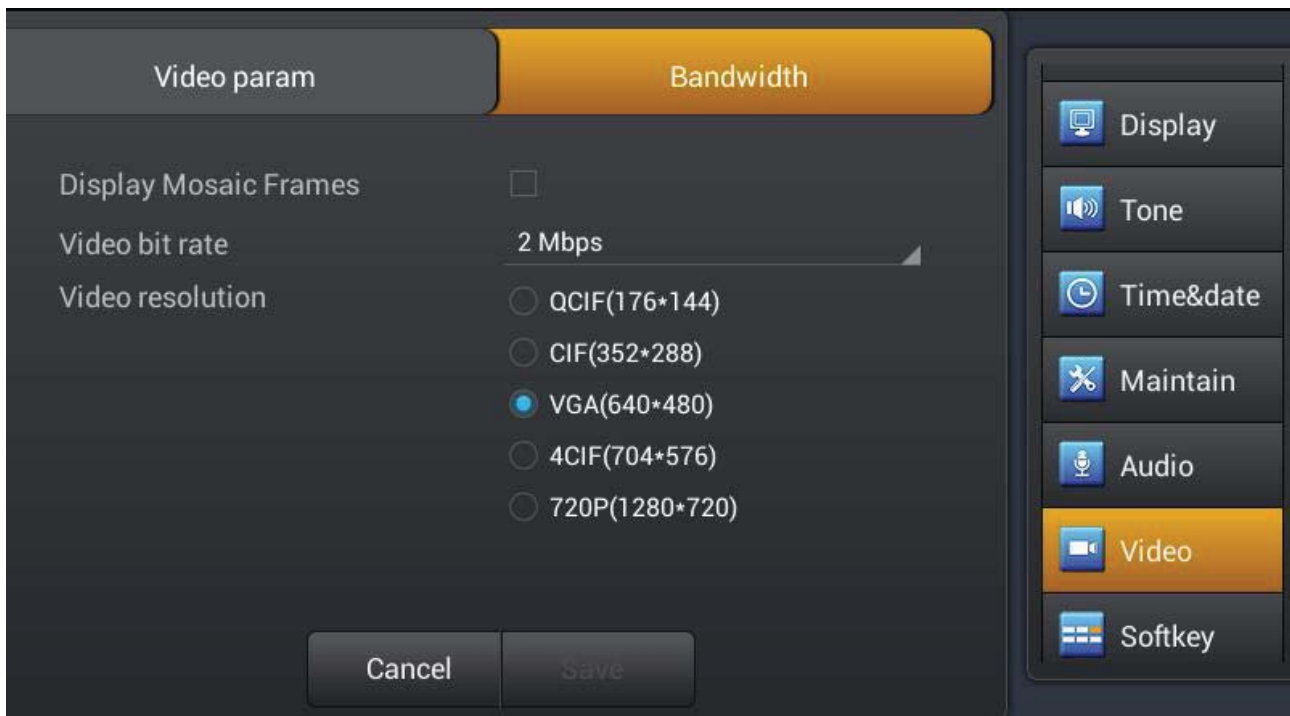

Bandwidth Interface

Configuration item	Meaning
Bandwidth	<p>Display Mosaic Frames: The video fluency will improve, but there will be a Mosaic when you enable this feature.; disable this configuration, normal phone calls but pause video picture.</p> <p>Video bit rate: Set receiving video bandwidth in video calls. You can choose 11 kinds of video bandwidth types (“64Kbps”, “192Kbps”, “256Kbps”, “384Kbps”, “512Kbps”, “768Kbps”, “1Mbps”, “1.6Mbps”, “2Mbps”, ”3Mbps” or ”4Mbps”).</p> <p>Video Resolution: Set video encoding resolution</p>


Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
 Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
 Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

in a video call. You can choose 4 types of video resolution (“QCIF (176*144)”, “CIF (352*288)” “VGA(640*480)”, “4CIF (704*576)” or” 720P (1280*720)”.

Softkey

Tap “Settings”---->“Softkey” enter softkey interface. Select softkey-screen first, then add or delete the softkey by clicking the arrow, you can also click the arrow up or down to adjust the softkey’s position.

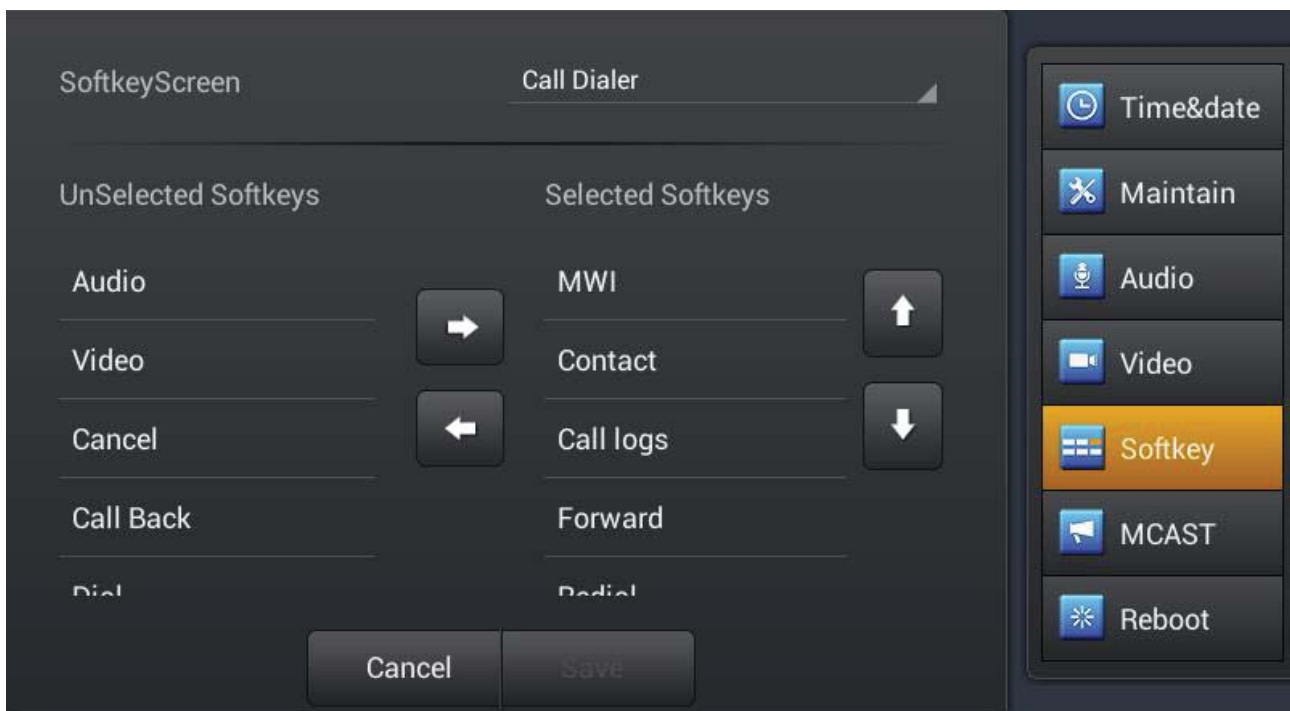

Softkey Interface

For example, the below picture shows the call dialer softkey. It can show up to six keys.



Call Dialer Softkey

MCAST

This feature allows you to make some kind of broadcast call to people who are in multicast group. You can configure a multicast DssKey on the phone, which allows you to send a Real Time Transport Protocol (RTP) stream to the pre-configured multicast address(es) without involving SIP signaling. You can also configure the phone to receive an RTP stream from pre-configured multicast listening address(es) without involving SIP signaling. You can specify up to 10 multicast listening addresses.

Tap “Settings”----> “MCAST” enter the multi-cast interface, you can follow the prompts to fill in the name and host, you can also set the priority for the call.

MCAST Setting	Meaning
Normal Call Priority	Define the priority of the active call, 1 is the highest priority, 10 is

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
 Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
 Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

	the lowest.
Enable Page Priority	The voice call in progress shall take precedence over all incoming paging calls.
Name	Listened multicast server name.
Host: port	Listened multicast server's multicast IP address and port.

Reboot

Tap “Maintain”----> “Reboot” interface. You can click “Reboot” button to pop-up “reboot” dialog box, click “OK” to reboot the phone, click “Cancel” will have no operation.


Call Service

Register

You can register the sip line on the web or by LCD, the below picture show the web register configuration. The status can show that if the line register successfully. When register success, the upper-left of status bar will show the display name and number.


Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

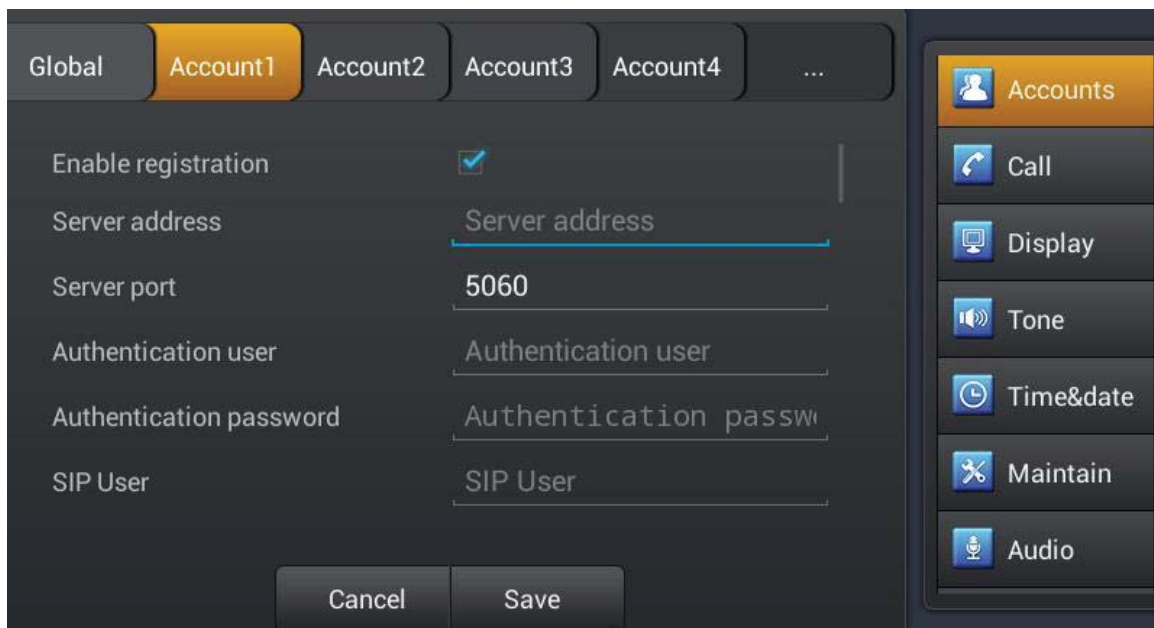

Register

Outgoing & Incoming call

1. Pick up the handset, press the headset/handsfree key or click line key to the dial interface;
2. Select the line and enter the number ;
3. Click #send, softkey-redial or  ;
4. You can also click video to invite a video call.

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737




When the phone has an incoming call, you can click audio or video to answer the call, if you did not select, the phone will follow the default ans mode you set when you pick up the handset. You can also choose forward or reject the call.

Video Call

1. Pick up the handset, press the headset/handsfree key or click line key to the dial interface;
2. Select the line and enter the number;
3. Click “Video” to make a call;

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxingqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

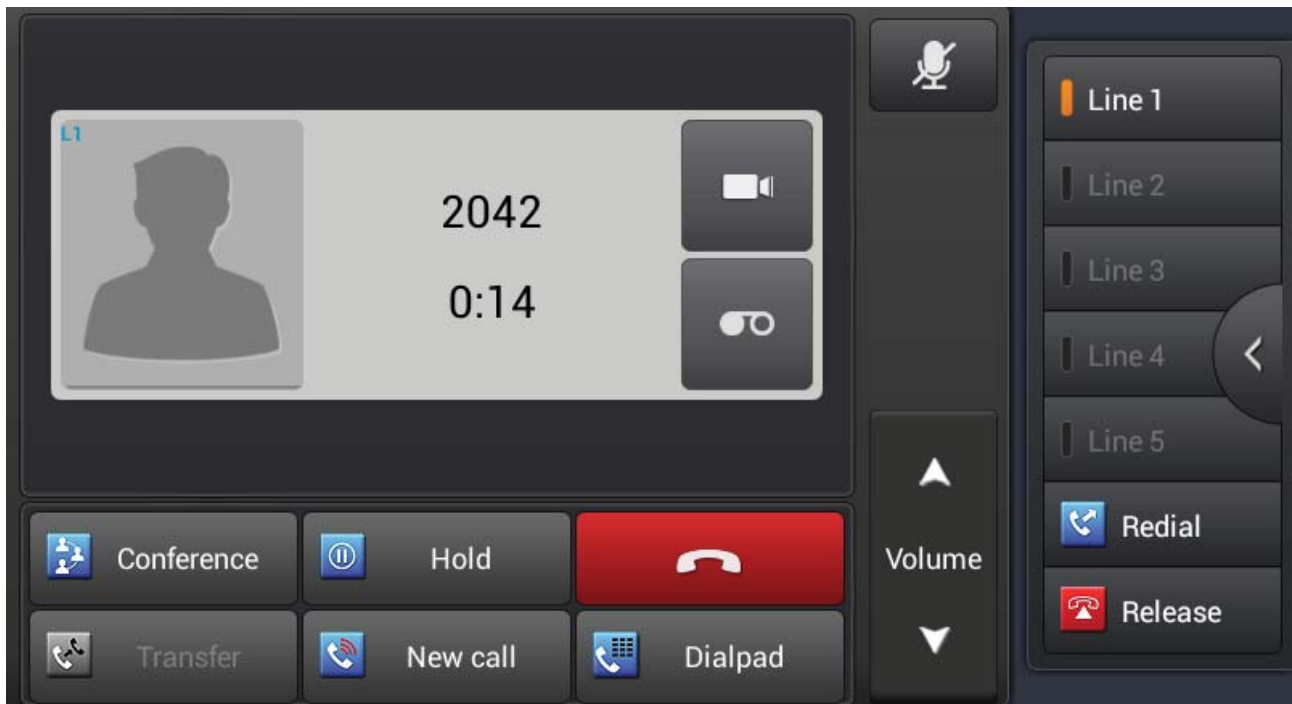

4. Click  to end or re-invite the video;




Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxingqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

5. Click     to adjust the video screen mode and video mode.

Blind Transfer

1. During the call, click transfer enter the dial interface;
2. Input the number or select contact from contacts or call log;
3. Click transfer;
4. If transfer success, the phone will auto end the call, if transfer failed, the phone will return to the conversation interface and hold the call.

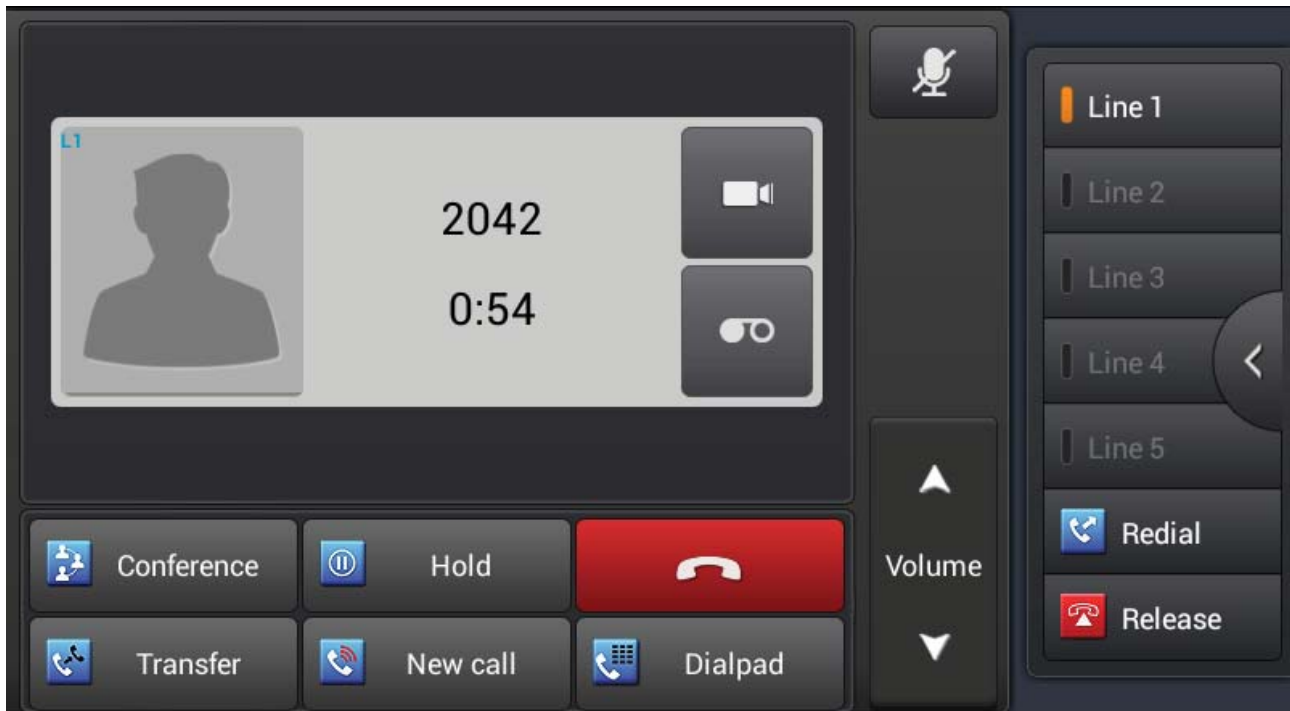

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737



Semi-attended Transfer

1. During the conversation, click transfer enter the dial interface;

2. Input the number or select contact from contacts or call log, final, click #send or ;

3. When the other end ringing, click transfer to complete the semi attend transfer.

NOTE: If you want to use this function, you need to enable the call waiting and call transfer.


Attended Transfer

1. During the conversation, press the transfer key ;

2. Input the number you want to transfer to;

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxingqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737


3. Tap “#send”; or ;
4. Press transfer key after the call answered , and transferred successfully.


NOTE:

Call waiting and call transfer must be enabled.
The SIP server must support RFC3515.

Conference Call

1. Press the CONF softkey during an active call;
2. The first call will be placed on hold and dial tone will be heard;
3. Dial the number to be added to the conference;

4. Press Send or ;
5. When the call is answered, the conference will be started;
6. To release the conference, press Split.

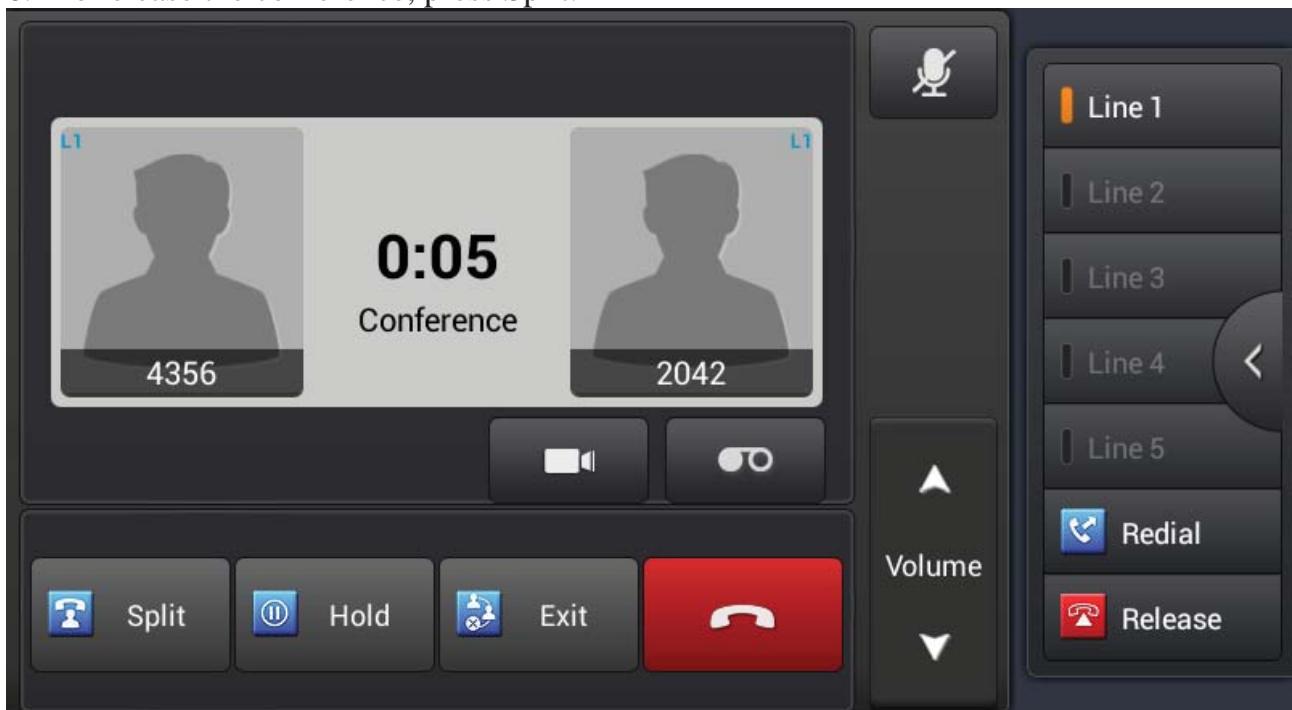

Conference Interface

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

Call Hold





1. Click the “Hold” to put the active call on hold;

Fanvil Technology Co., Ltd


HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

2. If there is only one call on hold, press the “Resume” to retrieve the call;
3. If there is more than one call on hold, click the dialog to change conversation, then click the Resume button to retrieve the call.

Call record

1. During the conversation, press the  icon to start record;
2. Please press the  icon to stop record;
3. If you want to listen to the recording, you can open the music application, enter playlists where my talking recordings.

NOTE: If you want to use this function, you need to check “Enable Record”.

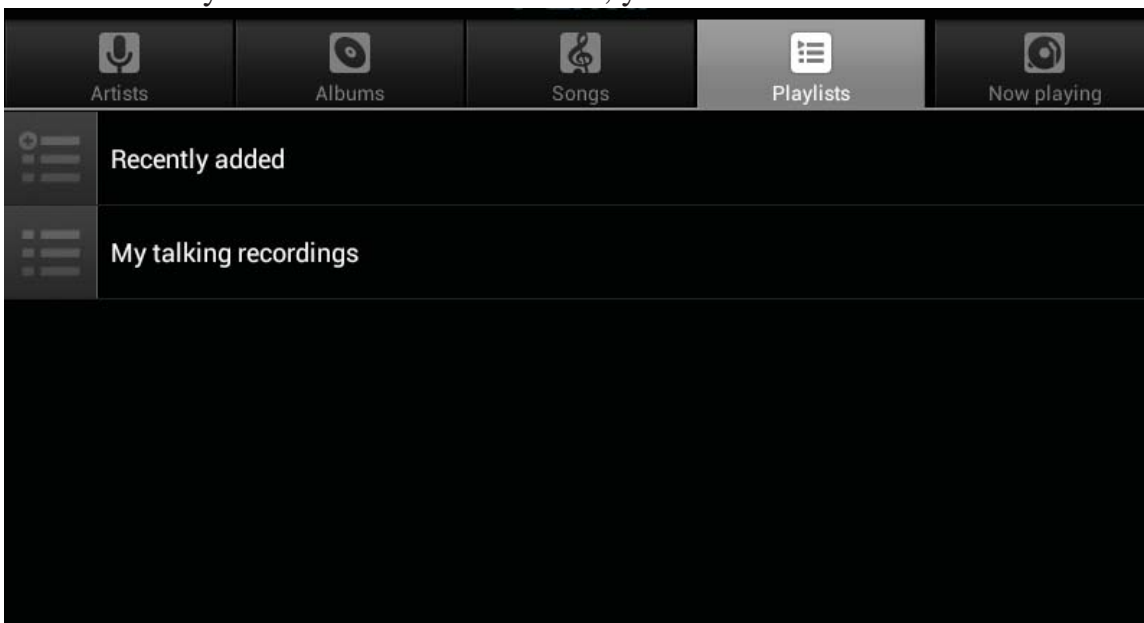

To Ring Page

When calls come in, “Collapse button” becomes “To Ring Page”, click it to jump to a call, or BLF Ring of page. And then, back to “Collapse button” when all the incoming calls are read.

Call to order according to the corresponding pages are accessed later restored to the

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxingqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

Collapse button.


For example:

1. PhoneA Enable operator mode;
2. PhoneA Press the home key, the main interface will enter dsskey interface;
3. PhoneA in the Expansion Module2 and Configure a dss key with numberB to memorykey(speed dial / blf / presence / none);
4. PhoneB call PhoneA When PhoneA in the other Expansion Module, Collapse button will become “To Ring Page”.



Android Settings

Ethernet configuration

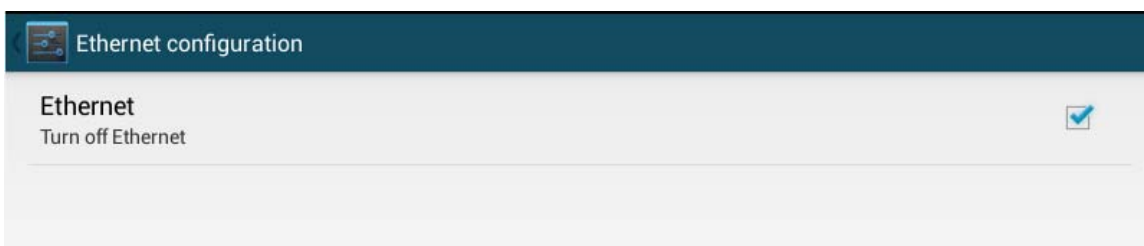

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxingqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

Click “Settings”, select “Ethernet configuration” switch to the Ethernet configuration interface. You can choose to turn on or turn off the Ethernet, if you turn on the Ethernet, it will auto connect to networking, otherwise, the phone can not connect to networking.

Security




1. Set the Screen lock.
 - Click “Settings”, enter the android settings interface;
 - Click Security->Screen lock enter the configuration interface;
 - Follow the prompts to set screen lock which you want to use;
 - Set automatically lock time.
2. Set owner info, it will display on the lock screen.
3. Set if make passwords visible.

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

Language&Input

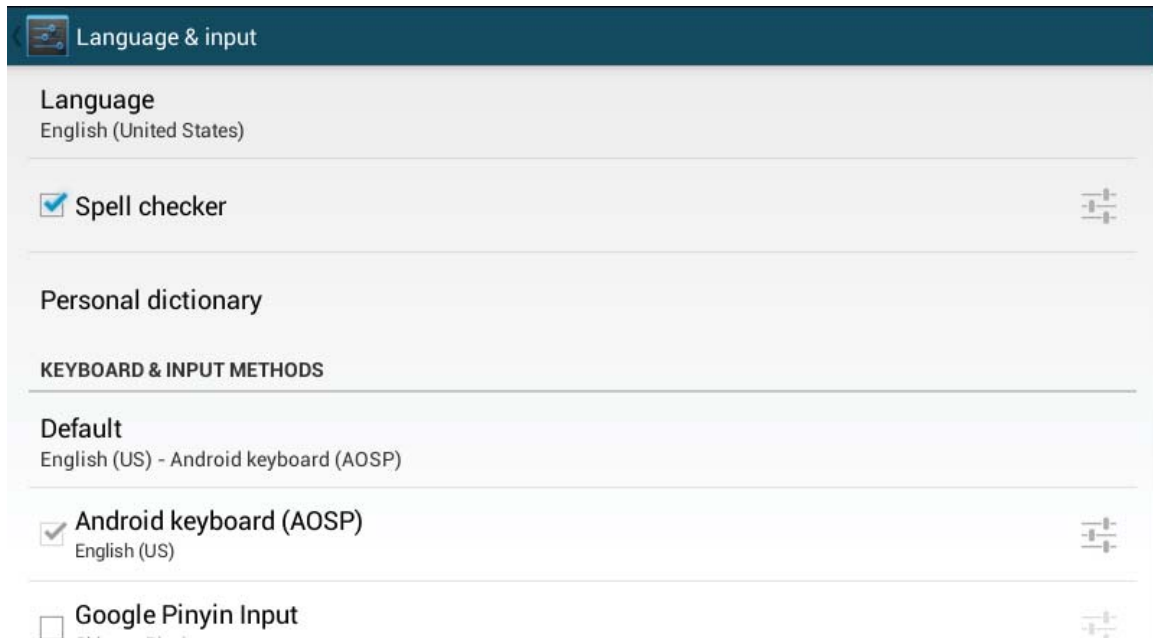

Language&Input Interface

1. Click “Settings” enter the android settings interface;
2. Click language&input enter the above picture interface;
3. Select language to set what you want to use;
4. Tick the input method which you want to use.

Web Settings

Logon

There are two levels of access: root level and general level. A user with root level access can browse and set all configuration parameters, while a user with general level can set all configuration parameters except server parameters for SIP and can not browse the configuration file.

Default user with general level:

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737


Username: guest

Password: guest

Default user with root level:

Username: admin

Password: admin

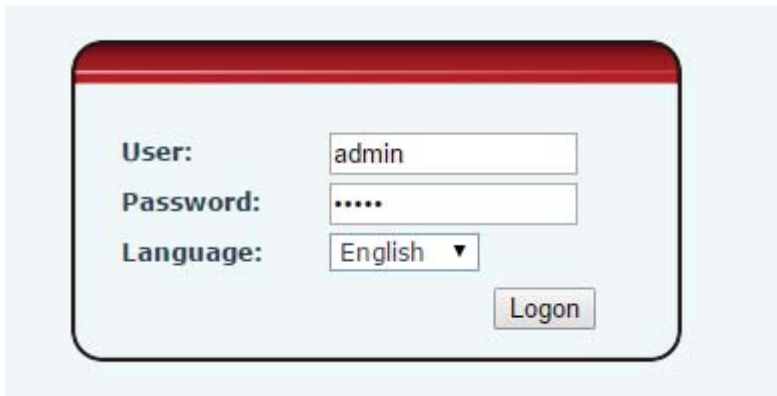

The image shows a login form with the following fields and controls:

- User:** A text input field containing the text "admin".
- Password:** A text input field containing five dots "....." to mask the password.
- Language:** A dropdown menu currently set to "English".
- Logon:** A button located to the right of the language dropdown.

Network

About the network mode settings, please refer to the phone settings.

QoS & VLAN

The phone supports 802.1Q/P protocol and DiffServ configuration. Use of a Virtual LAN (VLAN) allows voice and data traffic to be separated.

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

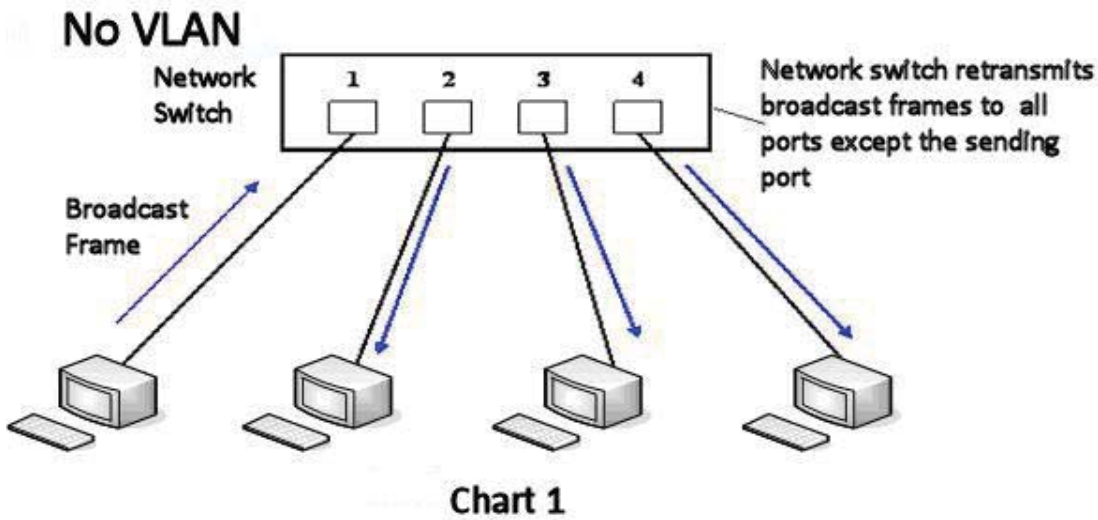


Chart 1 shows a network switch with no VLAN. Any broadcast frames will be transmitted to all other ports. For example, and frames broadcast from Port 1 will be sent to Ports 2, 3, and 4.

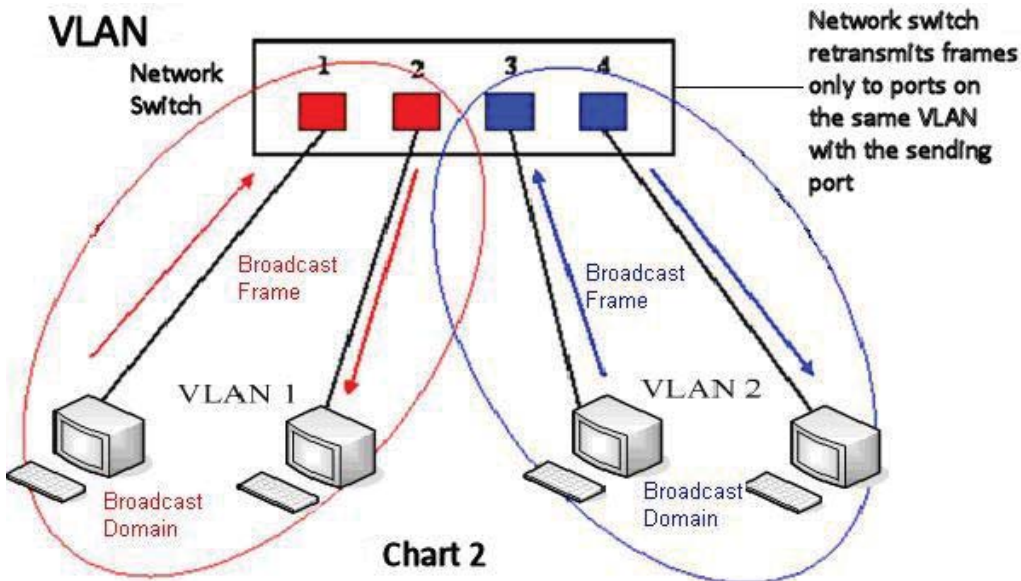


Chart 2 shows an example with two VLANs indicated by red and blue. In this example, frames broadcast from Port 1 will only go to Port 2 since Ports 3 and 4 are in a different VLAN. VLANs can be used to divide a network by restricting the transmission of broadcast frames.

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

Note: In practice, VLANs are distinguished by the use of VLAN IDs.

WAN
QoS&VLAN
SERVICE PORT
TIME&DATE

Link Layer Discovery Protocol (LLDP) Settings

Enable LLDP ! Packet Interval(1~3600) second(s)

Enable Learning Function

Quality of Service (QoS) Settings

Enable DSCP SIP DSCP (0~63)

Audio RTP DSCP (0~63) Video RTP DSCP (0~63)

WAN Port VLAN Settings

Enable WAN Port VLAN WAN Port VLAN ID (0~4095)

802.1P Priority (0~7)

LAN Port VLAN Settings

LAN Port VLAN Mode LAN Port VLAN ID (0~4095)

Field Name	Explanation
Enable LLDP	Enable or Disable Link Layer Discovery Protocol (LLDP) .
Packet Interval	The time interval for sending LLDP Packets.
Enable Learning Function	Enables the telephone to synchronize its VLAN data with the Network Switch. The telephone will automatically synchronize DSCP, 802.1p, and VLAN ID values even if these values differ from those provided by the LLDP server.
Enable DSCP	Enable or Disable Differentiated Services Code Point (DSCP) .
SIP DSCP	Specify the value of the SIP DSCP in decimal.
Audio DSCP	Specify the value of the Audio DSCP in decimal.
Video RTP DSCP	Specify the value of the Video RTP DSCP in decimal.
Enable WAN Port VLAN	Enable or Disable WAN Port VLAN .
WAN Port VLAN ID	Specify the value of the WAN Port VLAN ID. Range is 0-4095.
SIP 802.1P Priority	Specify the value of the voice 802.1p priority. Range is 0-7.
Audio 8021P Priority	Specify the value of the signal 8021.p priority. Range is 0-7.
LAN Port VLAN Mode	Follow WAN: LAN Port ID is same as WAN ID.

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
 Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
 Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

	Disable: Disable Port VALN. Enable: Specify a VLAN ID for the LAN port which is different from WAN ID.
LAN Port VLAN ID	Used when the VLAN ID is different from WAN ID. Range is 0-4095.

Service Port

Field Name	Explanation
Web Server Type	Specify Web Server Type - HTTP or HTTPS.
HTTP Port	Port for web browser access. Default value is 80. To enhance security, change this from the default. Setting this port to 0 will disable HTTP access. Example: The IP address is 192.168.1.70 and the port value is 8090, the accessing address is http://192.168.1.70:8090.
HTTPS Port	Port for HTTPS access. Before using https, an https authentication

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxingqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
 Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
 Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

	certification must be downloaded into the phone. Default value is 443.To enhance security, change this from the default.
Telnet port	Port for telnet access. Default value is 23.
RTP Port Range Start	Set the beginning value for RTP Ports. Ports are dynamically allocated.
RTP Port Quantity	Set the maximum quantity of RTP Ports. The default is 200.
Notes: Any changes made on this page require a reboot to become active. It is suggested that changes to HTTP Port and Telnet ports be values greater than 1024. Values less than 1024 are reserved. If the HTTP port is set to 0, HTTP service will be disabled.	

Registration

SIP Line SIP 1

Basic Settings >>

Status	Registered	Domain Realm	<input type="text"/>
Server Address	<input type="text" value="172.16.1.2"/>	Proxy Server Address	<input type="text"/>
Server Port	<input type="text" value="5060"/>	Proxy Server Port	<input type="text"/>
Authentication User	<input type="text" value="2047"/>	Proxy User	<input type="text"/>
Authentication Password	<input type="password" value="***"/>	Proxy Password	<input type="password"/>
SIP User	<input type="text" value="2047"/>	Backup Proxy Server Address	<input type="text"/>
Display Name	<input type="text" value="Jasmine"/>	Backup Proxy Server Port	<input type="text" value="5060"/>
Enable Registration	<input checked="" type="checkbox"/>	Server Name	<input type="text"/>

Audio Codecs >>

Video Codecs >>

Advanced SIP Settings>>

SIP Global Settings >>

Note: If the proxy configuration is same as the register configuration, in the web interface, the proxy fields are empty. While it is different with register configuration, the config info will display in the web interface. The backup proxy server will be used if the primary server is unavailable.

Set the audio codecs for current SIP Line.

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

SIP Line

Basic Settings >>

Audio Codecs >>

Disable codecs		Enable codecs
G.711A G.711U G.722 G.723.1 G.729AB ILBC AMR	<input type="button" value="→"/> <input type="button" value="←"/>	<input type="button" value="↑"/> <input type="button" value="↓"/>

Video Codecs >>

Advanced SIP Settings >>

SIP Global Settings >>

Dial Plan

Basic Settings

Basic Settings

<input checked="" type="checkbox"/>	Press "#" to Send
<input checked="" type="checkbox"/>	Send after <input type="text" value="5"/> second(s)(3~30)
<input type="checkbox"/>	Press # to Do Blind Transfer
<input checked="" type="checkbox"/>	Blind Transfer on Onhook
<input checked="" type="checkbox"/>	Attended Transfer on Onhook
<input checked="" type="checkbox"/>	Attended Transfer on Conference Onhook
<input type="checkbox"/>	Dial Prefix <input type="text"/>
<input type="checkbox"/>	Enable E.164
DSS Key Transfer Mode	<input type="text" value="Disabled"/>

This phone supports 7 dialing modes:

1. Press # to Send - Dial the desired number, and press # to send it to the server.
2. Send after seconds - Number will be sent to the server after the specified time.
3. Press # to Do Blind Transfer - Press # after entering the target number for the transfer.

The phone will transfer the current call to the third party.

4. Blind Transfer on Onhook - Hang up after entering the target number for the transfer. The phone will transfer the current call to the third party.
5. Attended Transfer on Onhook - Hang up after the third party answers. The phone will transfer the current call to the third party.
6. Attended Transfer on Conference Onhook- Hang up during a 3-way conference call, the other two ways will make a call.
7. Dial Prefix- If you set the prefix is 135856, and you want to dial the number 13585679801. Then when you dial the number, you can press and hold 0, when the

Fanvil Technology Co., Ltd

“+” appears, you can just input 79801 and send the number, the “+79801” is the number you input, but you can see the dialing number is 13585679801.

8. Enable E.164- You can refer to the E.164 standard.

9. DSS KEY Transfer Mode - It has four choices: Disable, Blind, Attended Transfer and New Call.

• **Disable:**

1. DSS key transfer mode is Disable; then configure a dsskey with numberB to memorykey(speed dial / blf / presence / none);
2. During the call, press DSS key, it will realize the corresponding function.

• **Blind Transfer:**

1. DSS key transfer mode is blind transfer; then configure a dsskey with numberB to memorykey(speed dial / blf / presence / none);
2. During the call, press DSS key to make blind transfer directly.

• **Attend Transfer:**

1. Enable “Attended Transfer on Onhook” ;
2. DSS key transfer mode is “attend transfer”; then configure a dsskey with numberB to memorykey(speed dial / blf / presence / none);
3. During the call, press DSS key to call B;
4. When B answer;
5. The phone hangup and a call was attended transfer with B.

• **New Call:**

1. DSS key transfer mode is “New Call”; then configure a dsskey with numberB to memorykey(speed dial / blf / presence / none);
2. During the call, press DSS key to call B;
3. Press conference key after B answered ,the conference will be started;
4. Press transfer key after B answered , and transferred successfully.

Dial Plan Add

This feature allows the user to create rules to make dialing easier. There are several different options for dial rules. The examples below will show how this can be used.

Example 1: Substitution -- Assume that it is desired to place a direct IP call to IP address

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxingqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

172.16.2.208. Using this feature, 123 can be substituted for 172.16.2.208.

User-defined Dial Plan Table

Digit Map	Call	Match To Send	Line	Alias Type:Number(length)	Suffix
"123"	Out	No	SIP(172.16.2.208:5060)		

Example 2: Substitution -- To dial a long distance call to Beijing requires dialing area code 010 before the local phone number. Using this feature 1 can be substituted for 010. For example, to call 62213123 would only require dialing 162213123 instead of 01062213123.

User-defined Dial Plan Table

Digit Map	Call	Match To Send	Line	Alias Type:Number(length)	Suffix
"1T"	Out	No	Default	rep:010(1)	

Example 3: Addition -- Two examples are shown. In the first case, it is assumed that 0 must be dialed before any 11 digit number beginning with 13. In the second case, it is assumed that 0 must be dialed before any 11 digit number beginning with 135, 136, 137, 138, or 139. Two different special characters are used.

x -- Matches any single digit that is dialed.

[] -- Specifies a range of numbers to be matched. It may be a range, a list of ranges separated by commas, or a list of digits.

User-defined Dial Plan Table

Digit Map	Call	Match To Send	Line	Alias Type:Number(length)	Suffix	Media
"13xxxxxxxxx"	Out	Yes	Default	add:0		Default
"13[5-9]xxxxxxxx"	Out	Yes	Default	add:0		Video

Dial Plan Add

Digit Map:

Apply to Call: Match to Send: Media:

Line: Destination: Port:

Alias(Optional): Number: Length:

Suffix(Optional):

Fanvil Technology Co., Ltd

HQ Add: Level 3, Block A, Gaoxinqi Building, Anhua Industrial Park, Qianjin 1 Road, 35th District, Bao'An, Shenzhen, 518101 P.R. China
 Tel: +86-755-2640-2199 Fax: +86-755-2640-2618 Email: fanvil@fanvil.com www.fanvil.com Beijing Tel: +86-10-5753-6809
 Suzhou Tel: +86-512-6592-0605 SEA Tel: +60-3-203-50737

Field Name	Explanation
Phone number	There are two types of matching: Full Matching or Prefix Matching. In Full matching, the entire phone number is entered and then mapped per the Dial Peer rules. In prefix matching, only part of the number is entered followed by T. The mapping with then take place whenever these digits are dialed. Prefix mode supports a maximum of 30 digits.
Destination	Set Destination address. This is for IP direct.
Port	Set the Signaling port, the default is 5060.
Alias	Set the Alias. This is the text to be added, replaced, or deleted. It is optional.
<p>Note: There are four types of aliases.</p> <p>1) All: xxx - xxx will replace the phone number;</p> <p>2) Add: xxx - xxx will be dialed before any phone number;</p> <p>3) Delete: The characters will be deleted from the phone number;</p> <p>4) Replace: xxx - xxx will be substituted for the specified characters.</p>	
Suffix	Characters to be added at the end of the phone number. This is optional.
Delete Length	Sets the number of characters to be deleted. For example, if this is set to 3, the phone will delete the first 3 digits of the phone number. This is optional.

Security



Update Security File

Select Security File:

Delete Security File

Select Security File:

SIP TLS File

sips.pem	(0 Bytes)
----------	-----------

HTTPS File

https.pem	(4501 Bytes)
-----------	--------------

Browse to the security file to be updated. Click the Update button to update.

Note: The sip TLS file and https file both support “xx.pem” format.